





# XC645CX

(v. 3.4)

# INDEX

|            |  |           |
|------------|--|-----------|
| <b>1.</b>  | <b><u>BEFORE PROCEEDING</u></b>  | <b>5</b>  |
| 1.1        | CHECK THE SW REL. OF THE XC645CX   | 5         |
| <b>2.</b>  | <b><u>GENERAL WARNING</u></b>  | <b>5</b>  |
| 2.1        |  PLEASE READ BEFORE USING THIS MANUAL | 5         |
| 2.2        |  SAFETY PRECAUTIONS                   | 5         |
| <b>3.</b>  | <b><u>GENERAL DESCRIPTION</u></b>  | <b>5</b>  |
| <b>4.</b>  | <b><u>COMPONENTS RELATED TO THE XC645CX</u></b>  | <b>6</b>  |
| 4.1        | CWC15KIT AND CWC30KIT: WIRING KITS   | 6         |
| 4.2        | CABCJ15 OR CABCJ30: 2 PIN CONNECTORS   | 7         |
| 4.3        | PP07, PP11, PP30 PP50: 4÷20MA PRESSURE TRANSDUCERS   | 7         |
| 4.4        | NP4-67: PIPE MOUNTING TEMPERATURE PROBE  | 7         |
| 4.5        | XJ485CX: TTL / RS485 SERIAL CONVERTER  | 7         |
| <b>5.</b>  | <b><u>WIRING &amp; ELECTRICAL CONNECTIONS</u></b>  | <b>8</b>  |
| 5.1        | GENERAL WARNINGS   | 8         |
| 5.2        | WIRING CONNECTIONS   | 8         |
| 5.3        | PROBES CONNECTION  | 9         |
| 5.4        | LOAD CONNECTIONS   | 10        |
| 5.5        | SAFETY AND CONFIGURABLE DIGITAL INPUTS – FREE VOLTAGE  | 10        |
| 5.6        | ANALOG OUTPUT CONNECTION   | 11        |
| 5.7        | HOW TO CONNECT MONITORING SYSTEM - RS485 SERIAL LINE   | 11        |
| <b>6.</b>  | <b><u>MOUNTING &amp; INSTALLATION</u></b>  | <b>12</b> |
| <b>7.</b>  | <b><u>FIRST INSTALLATION</u></b>   | <b>13</b> |
| 7.1        | HOW TO SET THE KIND OF GAS   | 13        |
| 7.2        | HOW TO SET THE RANGE OF THE PRESSURE PROBES  | 13        |
| <b>8.</b>  | <b><u>USER INTERFACE</u></b>   | <b>14</b> |
| 8.1        | DISPLAYING   | 14        |
| 8.2        | KEYBOARD   | 14        |
| 8.3        | ICONS  | 15        |
| <b>9.</b>  | <b><u>HOW TO SEE AND MODIFY THE SET POINT(S)</u></b>   | <b>15</b> |
| 9.1        | HOW TO SEE THE SET POINT OF COMPRESSORS AND/OR FANS  | 15        |
| 9.2        | HOW TO MODIFY THE SET POINT OF COMPRESSORS AND/OR FANS   | 16        |
| <b>10.</b> | <b><u>THE INFO MENU</u></b>  | <b>16</b> |
| <b>11.</b> | <b><u>PARAMETERS PROGRAMMING</u></b>   | <b>17</b> |
| 11.1       | HOW TO ENTER THE “PR1” PARAMETER LIST  | 17        |

|            |  |           |
|------------|--|-----------|
| 11.2       | HOW TO ENTER IN PARAMETERS LIST "PR2"                    | 17        |
| 11.3       | HOW TO CHANGE PARAMETER VALUES                           | 17        |
| <b>12.</b> | <b>HOW TO DISABLED AN OUTPUT</b>                         | <b>18</b> |
| 12.1       | HOW TO DISABLED AN OUTPUT DURING A MAINTENANCE SESSION.  | 18        |
| 12.2       | OUTPUT DISABLED SIGNALING.                               | 18        |
| 12.3       | REGULATION WITH SOME OUTPUTS DISABLED.                   | 18        |
| <b>13.</b> | <b>RUNNING HOURS OF LOADS</b>                            | <b>18</b> |
| 13.1       | HOW TO DISPLAY THE RUNNING HOURS OF A LOAD.              | 18        |
| 13.2       | HOW TO RESET THE RUNNING HOURS OF A LOAD.                | 18        |
| <b>14.</b> | <b>ALARM MENU</b>  | <b>19</b> |
| 14.1       | HOW TO SEE THE ALARMS                                    | 19        |
| <b>15.</b> | <b>KEYBOARD LOCKING</b>                                  | <b>19</b> |
| 15.1       | HOW TO LOCK THE KEYBOARD                                 | 19        |
| 15.2       | TO UNLOCK THE KEYBOARD                                   | 19        |
| <b>16.</b> | <b>USE OF THE PROGRAMMING "HOT KEY "</b>                 | <b>20</b> |
| 16.1       | HOW TO PROGRAM A HOT KEY FROM THE INSTRUMENT (UPLOAD)    | 20        |
| 16.2       | HOW TO PROGRAM AN INSTRUMENT USING A HOT KEY (DOWNLOAD)  | 20        |
| <b>17.</b> | <b>LIST OF PARAMETERS</b>                                | <b>20</b> |
| 17.1       | PLANT DIMENSIONING AND TYPE OF REGULATION.               | 20        |
| 17.2       | PROBES CONFIGURATION                                     | 22        |
| 17.3       | OTHERS INPUTS CONFIGURATION                              | 24        |
| 17.4       | DISPLAY AND MEASUREMENT UNIT                             | 25        |
| 17.5       | COMPRESSOR REGULATION                                    | 26        |
| 17.6       | LIQUID INJECTION THERMOSTAT                              | 27        |
| 17.7       | FANS REGULATION  | 27        |
| 17.8       | ALARMS – COMPRESSOR SECTION                              | 27        |
| 17.9       | ALARMS – DLT SECTION                                     | 28        |
| 17.10      | ALARMS – FANS SECTION                                    | 28        |
| 17.11      | SUCTION SUPERHEAT  | 28        |
| 17.12      | DYNAMIC SET POINT FOR FAN                                | 29        |
| 17.13      | ANALOG OUTPUT (OPTIONAL)                                 | 29        |
| 17.14      | OTHER  | 30        |
| <b>18.</b> | <b>TYPE OF REGULATION</b>                                | <b>32</b> |
| 18.1       | DIGITAL SCROLL REGULATION                                | 32        |
| 18.2       | PROPORTIONAL BAND REGULATION - ONLY FOR FANS             | 36        |
| 18.3       | CONDENSER WITH INVERTER OR EC FANS–ANALOG OUTPUT SETTING | 37        |
| 18.4       | ANALOG OUTPUT "FREE"                                     | 38        |
| <b>19.</b> | <b>ADDITIONAL FUNCTIONS</b>                              | <b>39</b> |
| 19.1       | COMPRESSOR RUNNING PROOF FUNCTION                        | 39        |
| 19.2       | FLOOD PROTECTION FUNCTION                                | 40        |
| 19.3       | SUCTION SUPERHEAT MONITORING                             | 41        |
| 19.4       | HOT GAS INJECTION VALVE                                  | 42        |

|            |                                       |           |
|------------|---------------------------------------|-----------|
| <b>20.</b> | <b>ALARM LIST</b>                     | <b>42</b> |
| 20.1       | TYPES OF ALARMS AND SIGNALING MANAGED | 42        |
| 20.2       | BUZZER MUTING                         | 45        |
| 20.3       | ALARM CONDITIONS – SUMMARY TABLE      | 46        |
| <b>21.</b> | <b>TECHNICAL FEATURES</b>             | <b>49</b> |
| <b>22.</b> | <b>PARAMETERS – DEFAULT VALUES</b>    | <b>50</b> |

# 1. BEFORE PROCEEDING

## 1.1 Check the sw rel. of the XC645CX

1. Look at the SW rel. of XC64D printed on the label of the controller.



2. If the SW release is 3.4, proceed with this manual otherwise contact Dixell to get the right manual.

# 2. GENERAL WARNING

## 2.1 Please read before using this manual

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

## 2.2 Safety Precautions

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.r.l." (See address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- Fit the probe where it is not accessible by the end user.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

# 3. General description

The XC645CX is designed to manage both compressors and fans in a condensing system such as a pack.

The compressors can be digital scroll, simple, multistage.

Control is by means of a neutral zone or proportional band and is based on the pressure or temperature sensed in the LP suction (compressors) and HP (condenser) circuits. A special algorithm balances the run hours of the compressors to distribute the work load uniformly. The controllers can convert both suction and discharge pressures and displays them as temperatures.

The front panel offers complete information on the system's status by displaying the suction and condenser pressure (temperatures), the status of the loads, possible alarms or maintenance conditions.

Each load has its own alarm input that is able to stop it when activated. To guarantee the total system's safety, there are also two inputs for low and high pressure switches: when these are activated, the system is stopped.


By means of the HOT KEY the controller can be easy programmed at power on.

The controller can be connected to the X-WEB, controlling and monitoring system, thanks to the serial TTL output, using the standard ModBus RTU protocol.

## 4. COMPONENTS RELATED TO THE XC645CX

| Name  | Description                          | Part number                |
|---|--------------------------------------|----------------------------|
| <b>Transformer</b>  | TF5 230V/12Vac                       | CD050010 00                |
| <b>Wiring kit 1.5m and 3m</b>   | CWC15-Kit (1,5m)<br>CWC30-Kit (3,0m) | DD500101 50<br>DD500103 00 |
| <b>Female disconnect able connector for digital input or analog output (4pcs)</b> | CABCJ15 (1,5m)<br>CABCJ30 (3,0m)     | DD200101 50<br>DD200103 00 |
| <b>TTL /RS485 serial converter</b>  | XJ485CX+CABRS02                      | J7MAZZZ9AA                 |
| <b>4-20mA suction pressure transducer</b>   | PP11 (-0.5÷11bar)                    | BE009302 07                |
| <b>4-20mA condenser pressure transducer</b>                                       | PP30 (0÷30bar)                       | BE009302 04                |
| <b>Hot key for programming</b>  | HOT KEY 4K                           | DK00000100                 |


### 4.1 CWC15KIT and CWC30KIT: wiring kits

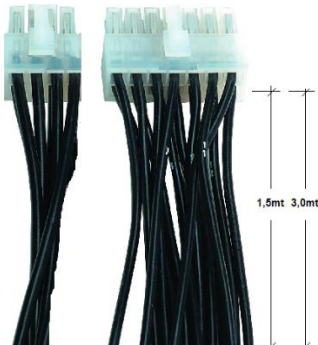

The XC645CX is provided with 2 socket connectors with 14 and 6 pins.

For the wiring the **CWC15KIT** (1.5m cable length) or **CWC30KIT** (3.0m cable length) have to be used.

## 4.2 CAB CJ15 or CAB CJ30: 2 PIN connectors

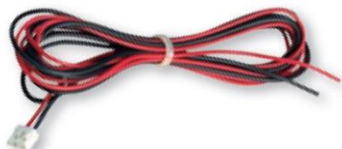

### NOTE:


Use the connection cable **CAB CJ15** (1.5m length) or the **CAB CJ30** (3.0m length) for the:

- **HP digital input** (25-26),
- **i2F configurable digital input** (27-28),
- **0-10Vdc or 4-20mA analogue output** (23-24)
- **oA6**, 12Vdc/40mA digital output (21-22) :

## 4.3 PP07, PP11, PP30 PP50: 4÷20mA pressure transducers

| NAME | CABLE LENGTH | RANGE              | DIXELL CODE |
|------|--------------|--------------------|-------------|
| PP07 | 2,0MT        | -0,5+7 bar rel FE  | BE009302 00 |
| PP11 | 2,0MT        | -0,5+11 bar rel FE | BE009302 07 |
| PP30 | 2,0MT        | 0+30 bar rel FE    | BE009302 04 |
| PP50 | 2,0MT        | 0+50 bar rel FE    | BE009302 05 |


## 4.4 NP4-67: pipe mounting temperature probe

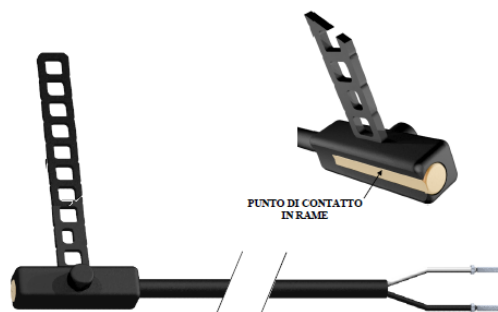

The **NP4-67** temperature probe can be used on the discharge line to monitor the discharge temperature of the Digital Scroll compressor.

**NP4-67** 1.5MT NTC probe  
 Measurement range: -40+110°C,  
 Cable 1,5mt  
 Code BN609001 52

## 4.5 XJ485CX: TTL / RS485 serial converter

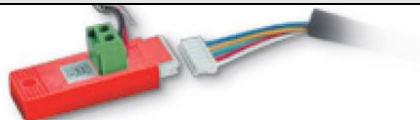

The **XJ485CX** is a TTL/RS485 external converter. Insert it into the TTL receptacle to convert the TTL output into a RS485 (+) and (-) signal for the monitoring system MODBUS\_RTU compatible. (XWEB).

## 5. WIRING & ELECTRICAL CONNECTIONS


### 5.1 General warnings

Before connecting cables make sure the power supply complies with the instrument's requirements.

Separate the probe cables from the power supply cables, from the outputs and the power connections.

**Do not exceed the maximum current allowed on each relay 3A resistive**, see also Technical Features, in case of heavier loads use a suitable external relay.

### 5.2 Wiring connections

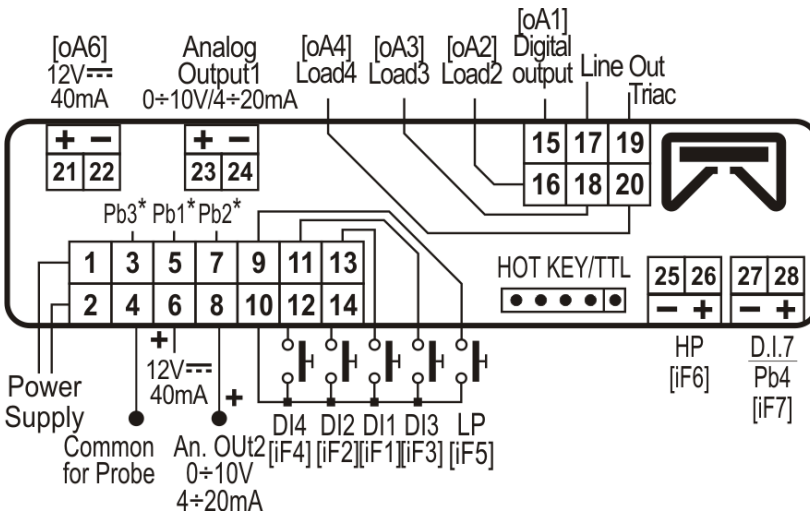

**Power supply: model at 12Vac/dc supply:** use terminals 1-2

**Power supply: model at 124Vac/dc supply:** use terminals 1-2

- Always use a class 2 transformer with minimum power 5VA such as TF5.

- Terminals [21-22], [23-24], [25-26], [27-28] are provided with JST 2 PINS connectors, they require the CAB CJ15 (1,5mt) or CAB CJ30 (3mt) wiring cables



## 5.3 Probes connection

### 5.3.1 General warnings

If using terminal ends be sure there are no bear parts which could cause short circuiting or introduce noise disturbance at high frequencies. To minimize the induced disturbances use shielded cables with the shield connected to earth.

**Pressure probe (4 - 20 mA):** respect the polarity. If using terminal ends be sure there are no bear parts which could cause short circuiting or introduce noise disturbance at high frequencies. To minimize the induced disturbances use shielded cables with the shield connected to earth.




**Temperature probe:** it is recommended to place the temperature probe away from direct air streams to correctly measure the temperature.

### 5.3.2 Probe wirings

**Low voltage side (14PINs connector):** Keep the cables away from the power cables. Use shielded cable to lengthen the cables.

**NOTE1: The PIN 4** is the common line for the temperature probes


**NOTE2: The PIN 6** gives a 12Vdc supply for the 4-20mA pressure transducers
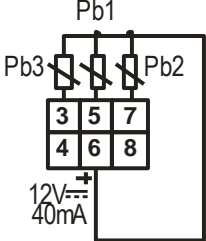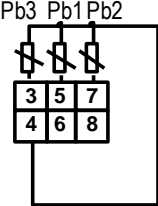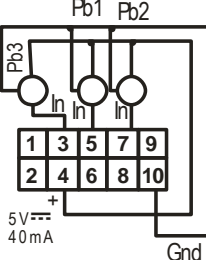
|  |   |
|--|---|
| <p><b>PP07 PP11, PP30, PP50 4÷20mA pressure transducers</b> respect the polarity.<br/> <b>Suction (P1C = Cur)</b><br/>           Brown (+) to terminal 6 ; white (-) to terminal 5<br/> <b>Condenser (P2C = Cur)</b><br/>           Brown (+) to terminal 6 ; white (-) to terminal 7<br/> <b>Suction 2 - optional (P3C = Cur)</b><br/>           Brown (+) to terminal 6; white (-) to terminal 3</p> |    |
| <p><b>Temperature probes (NTC 10K)</b><br/> <b>Suction: 4-5 (P1C = NTC)</b><br/> <b>Condenser: 4-7 (P2C = NTC)</b><br/> <b>Pb3 (P3C = NTC): 4-3</b></p>  |   |
| <p><b>Ratiometric transducers (0.5÷4.5Vdc)</b><br/> <b>Suction (P1C = 0-5)</b><br/>           5 (In); 4(+); 10 (gnd)<br/> <b>Condenser (P2C = 0-5)</b><br/>           7 (In); 4(+); 10 (gnd)<br/> <b>Suction 2 - optional (P3C = 0-5)</b><br/>           3 (In); 4(+); 10(gnd)</p>   |  |

## 5.4 LOAD CONNECTIONS

**!!!WARNING: Digital Scroll valve coil MUST operate at main voltage (230Vac or 115Vac)!!!!**

**NOTE: Main voltage side (6PINS connector): the PIN 17 is the common line for all the relay outputs and for the TRIAC.**

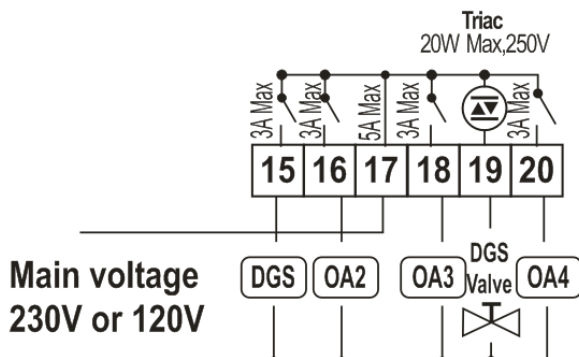

## 5.5 SAFETY AND CONFIGURABLE DIGITAL INPUTS – FREE VOLTAGE

### 5.5.1 Loads safety inputs

**!!!WARNING: free voltage inputs!!!!**

Controller has 7 configurable digital inputs, **free voltage**.

Each digital input can be set by the related parameter iF01,.. iF07.

The digital inputs are factory pre-set to operate as safety input for loads and as HP and LP. This input has to collect the status of the safety devices related to the compressor such as thermistors, pressure switches etc.

When this input is activated the correspondence load is switched off and not considered for the regulation.

The correspondence between loads (compressors or fans) and safety inputs is the following

| LOAD   | TERMINALS | INPUT | TERMINALS | SETTING    |
|--------|-----------|-------|-----------|------------|
| Load 1 | 15-17     | Di1   | 10-13     | iF01 = oA1 |
| Load 2 | 16-17     | Di2   | 10-14     | iF02 = oA2 |
| Load 3 | 18-17     | Di3   | 10-11     | iF03 = oA3 |
| Load 4 | 20-17     | Di4   | 10-12     | iF04 = oA4 |
| Load 6 | 21-22     | Di7   | 27-28     | iF07 = oA6 |

### 5.5.2 Circuit with 1 SUCTION and 1 CONDENSER: HP – LP Pressure switch connections

The controller is preset to manage also the **low pressure switch** and the **high pressure switch**, both the inputs are **free voltage**.

Connect the pressure switches as described in the following table.

| PRESSURE SWITCH | INPUT | TERMINALS | SETTING    |
|-----------------|-------|-----------|------------|
| LP              | Di5   | 10-9      | iF05 = LP1 |
| HP*             | Di6   | 25-26     | iF06 = HP  |

\* The digital input 6 (25-26) requires the adapter CAB CJ15 or CAB CJ30 to be used.  
See par. **Error! Reference source not found. Error! Reference source not found.**

### 5.5.3 *Additional function of the digital input 7 (27-28)*

The digital input 7 can operate also as probe.  
To enable this function set P4C as NTC or PTC.

## 5.6 Analog output connection

The controller supply up to 2 analog outputs, terminals, kind of output and functionality are shown in the following table

|                        | Terminals      | Related parameter   |
|------------------------|----------------|---|
| <b>Analog output 1</b> | 23[+] – 24[-]. | <b>AOC:</b> Kind of signal (4-20mA/0-10V)<br><b>AOF:</b> function   |
| <b>Analog output 2</b> | 8[+] – 10[-].  | <b>2AOC:</b> Kind of signal (4-20mA/0-10V)<br><b>2AOF:</b> function |

## 5.7 How to connect monitoring system - RS485 Serial line

The XC645CX can be connected to a monitoring system thanks to the serial output.  
To convert the TTL to RS485 signal, the XJ485CX has to be used.






**The XJ485CX** is a TTL/RS485 external converter. Insert it into the TTL receptacle to convert the TTL output into a RS485 (+) and (-) signal for the monitoring system MODBUS\_RTU compatible. (XWEB).  
The **Adr** parameter is the number to identify each electronic board. **Address duplication is not permitted**, in this case the communication with monitoring system is not guaranteed (the **Adr** is also the ModBUS address).

## 6. Mounting & installation

The instruments are suitable only for internal use. Instruments shall be mounted on panel, in a 29x71 mm hole, and fixed using the special brackets supplied.

The ambient operating temperature range is between -10÷60°C.

Avoid locations subject to heavy vibration, corrosive gases or excessive dirt. The same applies to the probes. Ensure ventilation around the instrument.

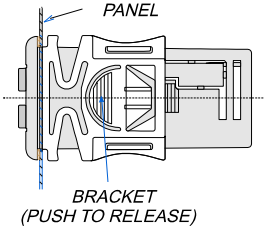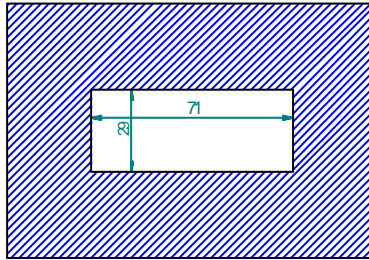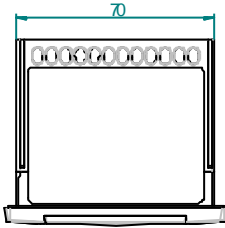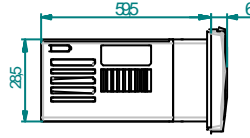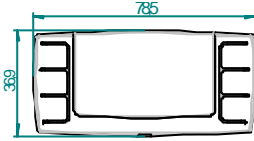

## 7. First installation

At first installation, it's necessary the following:

1. **Select the kind of gas.**
2. **Set the range of the pressure probes.**

In the following paragraph a short cut for the above operations.

Chapters 11 Parameters programming and 17 will show in detail these operations.

### 7.1 How to set the kind of gas

The controller has memorized the relation between temperature and pressure for some gases.

**The pre-set gas is: r404. (FtyP=r404)**

If another gas is used, act as in the following:

1. Enter the Programming mode by pressing the **Set** and **DOWN** key for 3s.
2. Select the "**Pr2**" parameter. Then enter the password **3 2 1 0**.
3. Select the **FtyP, kind of gas**, parameter.
4. Press the "**SET**" key: the value of the parameter will start blinking.
5. Use "**UP**" or "**DOWN**" to change the gas among the following: **r22**= R22; **r134**=134, **r404**=R404A; - **407A** = r407A; **407C**= r407C; **407F**= r407F; **410**= r410; **507**=R507; **CO2**= CO2; **r32** = r32; **r290** = r290; **r448** = r448A; **r449** = r449A, **r450** = r450A, **r513**= r513; **1234** = r1234ze
6. Press "**SET**" to store the new value and move to the following parameter.

**To exit:** Press **SET + UP** or wait 30s without pressing a key.

**NOTE:** the set value is stored even when the procedure is exited by waiting the time-out to expire.

### 7.2 How to set the range of the pressure probes

If an instrument with the following part number is used: XC645CX – xxxxF, it is pre-set to work with pressure probe with the following range:

Probe 1: -0.5 ÷11.0 bar (relative pressure);

Probe 2: 0÷30.0 bar (relative pressure)

If the probes you're using have a different range act as in the following:

To set the pressure range of the **Probe 1 (suction probe)** use the parameter:

**PA04: Adjustment of read out corresponding to 4mA (0.5V)**

**PA20: Adjustment of read out corresponding to 20mA (4.5V)**

Practically these parameters have to be set with the start and end scale of the probe range.

**How to do:**

1. Enter the Programming mode by pressing the **Set** and **DOWN** key for 3s.
2. Select the "**Pr2**" parameter. Then enter the password **3 2 1 0**.
3. Select the **PA04, adjustment of read out corresponding to 4mA (0.5V)**, parameter.
4. Press the "**SET**" key: the value of the parameter will start blinking.
5. Set the lower value of the probe range.
6. Push the **SET** key to confirm the value. The **PA20: adjustment of read out corresponding to 20mA (4.5V)** parameter will be displayed.
7. Set the higher value of the range.

8. Push the **SET** key to confirm the value. Next parameter will be displayed.

Do the same things for the Probe 2, **FA04**, **FA20** parameters.

## 8. User interface



### 8.1 Displaying

| UPPER DISPLAY                   | LOWER DISPLAY                     | ICONS  |
|---------------------------------|-----------------------------------|--|
| Suction temperature or pressure | Discharge temperature or pressure | - Working loads<br>- Measurement unit<br>- Alarm or status Icons |

### 8.2 Keyboard

**SET (SET)**

**Standard visualization:** to see or modify the set point. In programming mode it selects a parameter or confirms an operation.

**Alarm menu:** By holding it pressed for **3s**, the current alarm is erased.

**▲ (UP).**

**In programming mode:** it browses the parameter codes or increases the displayed value.

**With Hot key inserted:** it starts the Hot key programming procedure.

**To access the INFO menu:** push and release it to access the INFO menu.

**▼ (DOWN)**

**In programming mode:** it browses the parameter codes or decreases the displayed value.



**Manual restart of loads:** By holding it pressed for **3s**, it switches on again loads previous locked by a safety digital input alarm.



**MAINTENANCE/CLOCK:** To display the loads running hours  
By holding it pressed for 3s the **Maintaining menu** is entered



**To enter the Alarm menu**

















## KEY COMBINATIONS

▲ + ▼ To lock and unlock the keyboard.

SET + ▼ To enter the programming mode.

SET + ▲ To exit the programming mode.

## 8.3 Icons

| LED   | FUNCTION | MEANING  |
|---|----------|--|
| °C  | ON       | Celsius degrees  |
| °F  | ON       | Fahrenheit degrees   |
| bar   | ON       | bar displaying   |
| PSI   | ON       | PSI displaying   |
| kPa   | ON       | KPA displaying   |
|    | ON       | Digital scroll compressor (DGS) on   |
|    | Flashing | DGS is waiting to start (1HZ) or digital input alarm for DGS (2Hz).<br>or DGS in maintenance status (2Hz).           |
|    | ON       | Load 2 on  |
|    | Flashing | Load 2 is waiting to start (1HZ). or digital input alarm for Load 2 (2Hz).<br>or Load 2 in maintenance status (2Hz). |
|    | ON       | Load 3 on  |
|    | Flashing | Load 3 is waiting to start (1HZ). or digital input alarm for Load 3 (2Hz).<br>o Load 3 in maintenance status (2Hz).  |
|    | ON       | Load 4 on  |
|    | Flashing | Load 4 is waiting to start (1HZ). or digital input alarm for Load 4 (2Hz).<br>o Load 4 in maintenance status (2Hz).  |
|    | ON       | Load 6 on  |
|    | Flashing | Load 6 is waiting to start (1HZ). or digital input alarm for Load 6 (2Hz).<br>o Load 6 in maintenance status (2Hz).  |
|    | ON       | The valve of the Digital scroll compressor is energized  |
|    | ON       | The Maintenance menu has been entered  |
|    | Flashing | One or more loads have been placed in maintenance status   |
| LP  | ON       | Low pressure switch alarm  |
| HP  | ON       | High pressure switch alarm   |
|   | ON       | Alarm is happening   |
|  | ON       | All the stored alarms have been seen.  |
|  | Flashing | A new alarm has happened   |

## 9. How to see and modify the set point(s)

### 9.1 How to see the set point of compressors and/or fans

If the controller is managing both compressors and fans, both the set points are displayed in sequence, otherwise only the set point of the enabled section will be displayed.

- 1) Push and release the **SET** key;
- 2) The Lower display will show the “**SetC**” label, will the Upper display will show its value.
- 3) To see the fan set point, push again the **SET** key.
- 4) The Lower display will show the “**SetF**” label, will the Upper display will show the fan set point.

**To exit:** push the **SET** key or wait for 30 without pressing any keys.

## 9.2 How to modify the set point of compressors and/or fans

\*\*\*\*\***WARNING: before setting the target set points for the first time, check and, if necessary, modify the type of freon (par. FtyP) and the default unit of measurement (par. dEU) for compressors and fans**\*\*\*\*\*

### PRE-ACTION

1. **Set the kind of freon by means of the FtyP parameter (see 7.1 How to set the kind of gas)**
2. **Set the measurement unit (dEU par.).**
3. **Check and if necessary modify the set point limits (LSE and HSE par.).**

### PROCEDURE

1. Push the **SET** key for more than 2 seconds;
2. The Lower display will show the “**SEtC**” label, will the Upper display will show its value flashing.
3. To change the Set value, push the **▲** or **▼** within 30s.
4. To memorize the new value and pass to the fan set point, push the **SET** key.
5. The Lower display will show the “**SEtF**” label, will the Upper display will show the fan set point flashing.
6. To change its value, push the **▲** or **▼** within 30s.

**To exit:** push the **SET** key or wait for 30 without pressing any keys.

## 10. The INFO menu

The controller can display some information directly from the main menu.  
The INFO menu is accessible by pushing and releasing the **UP** key:

Here below the list of the information that can be displayed:

**NOTE: this information is displayed only if the related function is enabled**

- **P1t:** temperature value of the P1 probe
- **P1P:** pressure value of the P1 probe
- **P2t:** temperature value of the P2 probe
- **P2P:** pressure value of the P2 probe (if P2 present)
- **P3t:** temperature value of the P3 probe (if P3 present)
- **P3P:** pressure value of the P3 probe (if P3 present)
- **P4t:** temperature value of the P4 probe (if P4 present)
- **LinJ:** status of the injection output (“On” – “OFF”)  
This information is available only if one relay, oA2 +oA6 is set as “Lin”.
- **SEtd:** value of the **Dynamic Set point**.  
This information is available only if the Dynamic set point function is enabled (par. dSEP ≠ nP)
- **dStO:** percentage of the PWM output driving the valve of the Digital Scroll compressor.
- **dSFr:** value of temperature or pressure when the regulation filter of Digital Scroll compressor is enabled (par. dFE=YES).
- The “regulation filter” function calculates the average value of the pressure/temperature during a PWM cycle, and uses this value for the control algorithm
- **AO1** Percentage of the analog output 1 (4-20mA or 0-10V).
- This information is always available
- **AO2:** Percentage of the analog output 2 (4-20mA or 0-10V).



- This information is always available
- **SSC1: Supervising Set for circuit 1**, if supervising system is sending the set point to the controller
- **SSC2: Supervising Set for circuit 2**, if supervising system is sending the set point to the controller
- **SStF: Supervising Set for fan**, if supervising system is sending the set point to the controller
- **SH: Superheat**

**EXIT:** push the **SET+UP** keys together.

## 11. Parameters programming

### 11.1 How to enter the “Pr1” parameter list

To enter the “Pr1” parameter list, user accessible, operate as follows:

1. Hold pressed the **SET** and **DOWN** key for 3s.
2. The controller displays the name of the parameter in the Lower display, its value on the Upper display.
3. Press the **“SET”** key: the value of the parameter will start blinking.
4. Use **“UP”** or **“DOWN”** to change the value.
5. Press **“SET”** to store the new value and move to the following parameter.

**To exit:** Press **SET + UP** or wait 30s without pressing a key.

**NOTE:** the set value is stored even when the procedure is exited by waiting the time-out to expire.

### 11.2 How to enter in parameters list “Pr2”

The “Pr2” parameter list is protected by a security code (Password).

**SECURITY CODE is            3210**

To access parameters in “Pr2”:

1. Enter the “Pr1” level.
2. Select “Pr2” parameter and press the **“SET”** key.
3. The flashing value “0 ---” is displayed.
4. Use **▲** or **▼** to input the security code and confirm the figure by pressing **“SET”** key.
5. Repeat operations 2 and 3 for the other digits.

**NOTE:** each parameter in “Pr2” can be removed or put into “Pr1” (user level) by pressing **“SET”** + **▼**. When a parameter is present also in “Pr1” decimal point of the lower display is on.

### 11.3 How to change parameter values

1. Enter the Programming mode.
2. Select the required parameter with **▲** or **▼**.
3. Press the **“SET”** key the value start blinking.
4. Use **▲** or **▼** to change its value.
5. Press **“SET”** to store the new value and move to the following parameter.


**To exit:** Press **SET + UP** or wait 15s without pressing a key.

**NOTE:** the new programming is stored even when the procedure is exited by waiting the time-out.

## 12. How to disabled an output

To disabled an output during a maintenance session means to exclude the output from the regulation.

### 12.1 How to disabled an output during a maintenance session.

1. Push the **MAINTENANCE/CLOCK** () key for 3s.
2. The LED's of the first output is switched on, the Lower display shows the “**StA**” label, while the Upper display shows the “**On**” label if the first output is enabled, or the “**oFF**” label if the output is disabled for a maintenance section.  
With compressor with more steps all the LED's linked to the compressor and the valves are switched on..
3. Select the output by pressing the **UP** or **DOWN** key.
4. **To modify the status of the output:** push the **SET** key, the status of the output starts flashing, then push the UP or DOWN to pass from “**On**” to “**oFF**” and vice versa.
5. Push the **SET** key to confirm the status and pass to the next output..

**To exit:** push the **CLOCK** key or wait 30 sec

### 12.2 Output disabled signaling.

If an output is disabled its led blinks (2 Hz)

### 12.3 Regulation with some outputs disabled.


If some outputs are disabled they don't take part to the regulation, so the regulation goes on with the other outputs.

## 13. Running hours of loads

### 13.1 How to display the running hours of a load.

The controller memorizes the running hours of each load.

To see how long a load has been working follow this procedure:

1. Press and release the “**MAINTENANCE/CLOCK** ()” key.
2. The led of the first output is switched on, the Upper Display shows the “**HUR**” label, while the Lower Display shows the shows the running hours of the first output.
3. To see the running hours of the following load press the UP key .

**To exit:** push the  key or wait 30 sec

### 13.2 How to reset the running hours of a load.

1. Display the running hour according to the above procedure.

2. Select the load by pressing the UP key.
3. Push the **SET** key (immediately on the lower display the **rSt** label is displayed).
4. Hold pushed the key for some seconds till the "**rSt**" label starts flashing and the lower display shows zero.

**To exit:** push the **CLOCK** key or wait 30 sec


**NOTE:** if the **SET** key is released within 2s, the controller reverts to display the running hours of the selected loads..

## 14. Alarm Menu

The controller memorizes the last 20 alarms happened, together with their duration..

To see the alarm codes see par. **par. 18.4.**

### 14.1 How to see the alarms

1. Push the  **Alarm** key.
2. The last alarm happened is showed on the Upper display, while the lower display shows its number.
3. Push again the **▲** key and the other alarm are displayed starting from the most recent.
4. To see the alarm **duration** and push the **SET** key.
5. By pushing again the **▲** or **SET** key the next alarm is displayed.

#### Alarms erasing.

1. Enter the Alarm Menu.
2. To erase the displayed alarm push the "**SET**" key till the "**rSt**" label will be displayed in the Lower Display,  
**NOTE** the running alarms cannot be erased..
3. To erase the whole Alarm Menu, hold pressed the "**SET**" key for 10s.

## 15. Keyboard locking

### 15.1 How to lock the keyboard

1. Keep the **▲** and **▼** keys pressed together for more than 3 s the **▲** and **▼** keys.
2. The "**POF**" message will be displayed and the keyboard is locked. At this point it is only possible to view the set point or enter the HACCP menu.

### 15.2 To unlock the keyboard

Keep the **▲** and **▼** keys pressed together for more than 3s till the "**POn**" flashing message appears.

## 16. Use of the programming “HOT KEY “

### 16.1 How to program a hot key from the instrument (UPLOAD)

1. Program one controller with the front keypad.
2. When the controller is ON, insert the “Hot key” and push  $\blacktriangle$  key; the “uPL” message appears followed a by flashing “End”
3. Push “SET” key and the End will stop flashing.
4. Turn OFF the instrument remove the “Hot Key”, then turn it ON again.

**NOTE:** the “Err” message is displayed for failed programming. In this case push again  $\blacktriangle$  key if you want to restart the upload again or remove the “Hot key” to abort the operation.

### 16.2 How to program an instrument using a hot key (DOWNLOAD)

1. Turn OFF the instrument.
2. Insert a **programmed “Hot Key” into the 5 PIN receptacle** and then turn the Controller ON.
3. Automatically the parameter list of the “Hot Key” is downloaded into the Controller memory, the “doL” message is blinking followed a by flashing “End”.
4. After 10 seconds the instrument will restart working with the new parameters.
5. Remove the “Hot Key”..

**NOTE** the message “Err” is displayed for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the “Hot key” to abort the operation. The unit can UPLOAD or DOWNLOAD the parameter list from its own E2 internal memory to the “Hot Key” and vice-versa.

## 17. List of parameters

### 17.1 Plant dimensioning and type of regulation.

The XC645CX is pre-set to drive a Digital Scroll compressor.

The relay 15-17 is set to manage the Digital compressor, while the TRIAC output 17-19 drives its solenoid valve.

**oA1 (term. 15-17), oA2 (term. 16-17), oA3 (term. 17-18), oA4 (term. 17-20), oA6 (term. 21-22) outputs 2 3 4 6 configuration:** by means of these parameters the plant can be dimensioned according to the number and type of compressors and/or fans and the number of steps for each one.

Each relay according to the configuration of the oA(i), where (i) = 1, 2, 3, 4, 5, 6 parameter can work as:

- **Not used:** oA(i) = nu
- **Compressor circuit1:** oA(i) = cPr1,
- **Digital compressor:** oA1 = dGS
- **Blocked bank for Digital Stream<sup>®</sup> 6D:** oA(i) = 6dG
- **Step:** oAi = StP
- **Fan:** oAi = FAn
- **Fan with inverter/ECl fan:** oA(i) = InF
- **Injection of cooling liquid:** oAi = Lin
- **Alarm:** oAi = ALr
- **Flood protection function:** oA(i) = Liq
- **Valve for hot gas injection in case of low superheat:** oA(i) = HG<sub>i</sub>

**NOTE:** also the “dGs” “CPr2” “inC1”, “inC2” and “dGSt” values are present. These values **must not** be used..

According to the oA2, oA3, oA4, oA6 configuration, 2 kinds of plant can be defined:

**Rack with compressors only:** all the oAi different from FAn and inF


**Rack with compressors and fans:** both FAn and CPr are used for oAi.

**NOTE: COMPRESSOR WITH STEPS CONFIGURATION:** the output of compressor has to be set before the output of the step.

**ES.** Compressor with 1 step: oA2 = cPr1, oA3= StP.

**If an oAi set as step without any previous oAi set as cPr the configuration alarm “CStP” will be activated.**

**PLANT CONFIGURATION EXMPLES:**

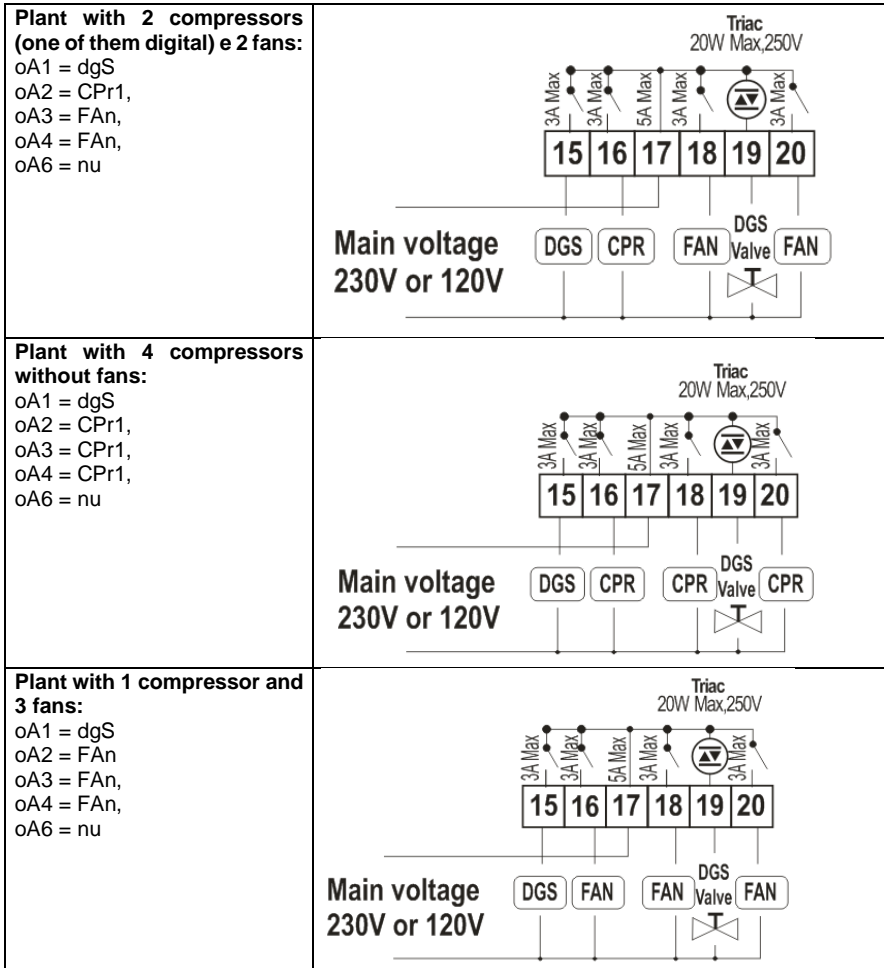

**dGty** Kind of digital compressor

**SCrL** = Digital Scroll: the range of capacity modulation starts from 10% to 100%

**StrM** = Digital Stream: the range of capacity modulation starts from 0% to 100%

**StP** **Valve outputs (unloader) polarity:** polarity of the outputs for capacity valves. It determines the status of the relays associated with the capacity valves (only for homogeneous and stepped-capacity compressors)

**oP**=valve activated with open contacts of the relay;

**cL**= valve activated with close contacts of the relay.

**FtyP:** **Refrigerant type:** set the kind of gas refrigerant used in the plant:

| LABEL | REFRIGERANT    | OPERATING RANGE    |
|-------|----------------|--------------------|
| R22   | r22            | -50-60°C/-58÷120°F |
| r134  | r134A          | -70-60°C/-94÷120°F |
| r404A | r404A          | -50-60°C/-58÷120°F |
| r407A | r407A          | -50-60°C/-58÷120°F |
| r407C | r407C          | -50-60°C/-58÷120°F |
| r407F | r407F          | -50-60°C/-58÷120°F |
| r410  | r410           | -50-60°C/-58÷120°F |
| r507  | r507           | -70-60°C/-94÷120°F |
| CO2   | r744 - Co2     | -50-30°C/-58-86°F  |
| r32   | r32            | -70-60°C/-94÷120°F |
| r290  | r290 – Propane | -50-60°C/-58÷120°F |
| r448  | r448A          | -45-60°C/-69÷120°F |
| r449  | r449A          | -45-60°C/-69÷120°F |
| r450  | r450A          | -45-60°C/-69÷120°F |
| r513  | r513           | -45-60°C/-69÷120°F |
| 1234  | r1234ze        | -18÷50°C/0÷122°F   |

**Sty** **Compressors rotation enabling**

**YES** = rotation enabled : this algorithm distributes the working time between the various compressors to ensure even run times.

**no** = fixed sequence: the compressors are enabled and disabled in fixed sequence: first, second etc.

**NOTE:** The **digital scroll compressor** is always started as first and switched off as last. In any case, if it is locked because of safety timers, it can be started to maintain the pressure in the regulation band. See par. dGSP

**rot** **Activation: type of sequence**

**YES** = rotation: this algorithm distributes the working time between the various loads to ensure even run times.

**no** = fixed sequence: the compressors are enabled and disabled in fixed sequence: first, second etc.

**NOTE:** The **digital scroll compressor** is always started as first and switched off as last. In any case, if it is locked because of safety timers, another compressor is started to maintain the pressure in the regulation band.

## 17.2 Probes configuration

Probes can be used in different ways according to plant features, as described in the following table:

### 17.2.1 Suction probe configuration

**P1c:** **Suction probe setting (probe 1):**

**nP** = not used: don't set it;

**Cur** = 4 ÷ 20 mA pressure transducer; use term. 6(+), 5 (in); 10 (gnd) if present

tEn = 0.5÷4.5V ratiometric pressure transducer; use term. 4(+), 5 (in); 10 (gnd)

ntc = NTC 10K probe; use term. 4- 5

**PA04: Adjustment of read out for the Probe 1** (used only if Pbc=Cur or tEn). Corresponding to **4mA or 0.5V** input signal, given by the suction probe (-1.0 ÷ PA20bar; -15÷PA20PSI; -100 ÷ PA20KPA)

E.I. **PP11** relative pressure transducer, range -0.5÷11.0 bar. PA04=-0.5; PA20=11.0

**PP30** relative pressure transducer, range: 0÷30bar. PA04=0.0; PA20=30.0.

**PA20: Adjustment of read out for the Probe 1** corresponding to **20mA or 4.5V** input signal, given by the suction probe (PA04 ÷ 51.0BAR; PA04 ÷ 750PSI; PA04 ÷ 5100KPA).

**CAL: Probe 1 calibration** the range depends on the dEU parameter:

dEU=bar or °C: -12.0÷12.0;

dEU=PSI or °F: -20÷20;

dEU=kPA: -120÷120;

### 17.2.2 Condenser probe configuration

**P2c: Condenser probe setting (probe 2):**

nP = not used:

Cur = 4 ÷ 20 mA pressure transducer; use term. 6(+), 7 (in); 10 (gnd)

tEn = 0.5÷4.5V ratiometric pressure transducer; use term. 4(+), 7 (in); 10 (gnd)

ntc = NTC 10K probe; use term. 4- 7

**FA04: Adjustment of read out for the Probe 2** (used only if Pbc2=Cur or tEn). corresponding to **4mA or 0.5V** input signal, given by the delivery probe

(-1.0 ÷ FA20bar; -15÷FA20PSI; -100 ÷ FA20KPA)

**FA20: Adjustment of read out for the Probe 2** corresponding to **20mA or 4.5V** input signal, given by the condensing probe (FA04 ÷ 51.0BAR; FA04 ÷ 750PSI; FA04 ÷ 5100KPA)

**FCAL: Probe 2 calibration** the range depends on the dEU parameter:

dEU=bar or °C: -12.0÷12.0;

dEU=PSI or °F: -20÷20;

dEU=kPA: -120÷120;

### 17.2.3 Probe 3 configuration

**P3c: Probe 3 setting:**

nP = not used:

Cur = 4 ÷ 20 mA pressure transducer; use term. 6(+), 3(in); 10(gnd) if present

tEn = 0.5÷4.5V ratiometric pressure transducer; use term. 4(+), 3(in); 10(gnd)

10 = NTC 10K

86 = NTC 86K

**O3: Probe 3 calibration** the range depends on the dEU parameter:

dEU=bar or °C: -12.0÷12.0;

dEU=PSI or °F: -20÷20;

dEU=kPA: -999÷999;

### 17.2.4 Probe 4 configuration

**P4c: Probe 4 setting (22-23):**

nP = not used:

nt10 = NTC 10K 38-42

nt86 = NTC 86K 38-42

**O4: Probe 4 calibration** the range depends on the dEU parameter:

dEU= °C: -12.0÷12.0;

dEU= °F: -200÷200;

### 17.2.5 Probe selection for fan

**FPb: Probe selection for condenser fan**

nP = not used:

P1 = Probe 1  
P2 = Probe 2  
P3 = Probe 3

## 17.3 Others inputs configuration

- iF01 Digital input 1 configuration (10-13)**  
**nu = Not used:** the digital input is disabled.  
**oA1=** Safety digital input for load 1, term. 15-17; (Factory setting);  
**oA2 =** Safety digital input for load 2, term. 16-17  
**oA3 =** Safety digital input for load 3, term. 17-18  
**oA4 =** Safety digital input for load 4, term. 17-20  
**oA6 =** Safety digital input for load 6, term. 21-22  
**inF =** Safety digital input of inverter for fan, used when none relay is configured as inverter for fans  
**LP1 =** Low pressure switch  
**HP =** High pressure switch  
**ES =** Energy saving;  
**oFF =** instrument shut down;  
**LL =** liquid level alarm  
**SIL =** to enable the silence function  
**EAL =** generic external alarm, it doesn't affect the regulation  
**Co1 =** running proof function for load 1, term. 15-17  
**Co2 =** running proof function for load 2, term. 16-17  
**Co3 =** running proof function for load 3, term. 17-18  
**Co4 =** running proof function for load 4, term. 17-20  
**Co6 =** running proof function for load 6, term. 21-22  
**NOTE:** also the following values **oA5, LP2, Co5**, are present. These values **must not** be used
- iF02 Digital input 2 configuration (10-14)** – For the values see iF01; Factory setting oA2.  
**iF03 Digital input 3 configuration (10-11)** – For the value see iF01; Factory setting oA3  
**iF04 Digital input 4 configuration (10-12)** – For the value see iF01; Factory setting oA4  
**iF05 Digital input 5 configuration (9-10)** – For the value see iF01; Factory setting LP1  
**iF06 Digital input 6 configuration (25-26)** – For the value see iF01; Factory setting HP  
**iF07 Digital input 7 configuration (27-28)** ) – For the value see iF01; Factory setting LL  
**NB: Digital input 7 is enabled only when P4C=NP, otherwise it operates as temperature probe**
- iP01 Digital input 1 polarity (10-13):**  
**oP:** the digital input is activated by opening the contact;  
**CL:** the digital input is activated by closing the contact.
- iP02 Digital input 2 polarity (10-14):**  
**oP:** the digital input is activated by opening the contact;  
**CL:** the digital input is activated by closing the contact.
- iP03 Digital input 3 polarity (10-11):**  
**oP:** the digital input is activated by opening the contact;  
**CL:** the digital input is activated by closing the contact.
- iP04 Digital input 4 polarity (10-12):**  
**oP:** the digital input is activated by opening the contact;  
**CL:** the digital input is activated by closing the contact.
- iP05 Digital input 5 polarity (9-10):**  
**oP:** the digital input is activated by opening the contact;  
**CL:** the digital input is activated by closing the contact.
- iP06 Digital input 6 polarity (25-26):**  
**oP:** the digital input is activated by opening the contact;  
**CL:** the digital input is activated by closing the contact.



- iP07 Digital input 7 polarity (27-28):**  
**oP:** the digital input is activated by opening the contact;  
**CL:** the digital input is activated by closing the contact.
- d1d Digital input set as oA1 or Co1 activation delay (0÷255s),** This delay it is considered when i1F or i2F or i3F or i4F or i5F or i6F or i7F is set as oA1 or Co1
- d2d Digital input set as oA2 or Co2 activation delay (0÷255s),** This delay it is considered when i1F or i2F or i3F or i4F or i5F or i6F or i7F is set as oA2 or Co2
- d3d Digital input set as oA3 or Co3 activation delay (0÷255s),** This delay it is considered when i1F or i2F or i3F or i4F or i5F or i6F or i7F is set as oA3 or Co3
- d4d Digital input set as oA4 or Co4 activation delay (0÷255s),** This delay it is considered when i1F or i2F or i3F or i4F or i5F or i6F or i7F is set as oA4 or Co4
- d5d Digital input set as oA5 or Co6 activation delay (0÷255s),** This delay it is considered when i1F or i2F or i3F or i4F or i5F or i6F or i7F is set as oA5 or Co6
- did Liquid level alarm, signaling delay:** (enabled only if one digital input is set as LL) 0÷255min
- didA External alarm, signaling delay:** (enabled only if one digital input is set as EAL) 0÷255min
- ALMr Manual reset of alarms for compressors and fans.**  
**no** = automatic recover of alarm: regulation restart when the correspondent digital input is disabled; **yES** = manual recover for the alarms of compressors and fans See also par.20.1.2

## 17.4 Display and Measurement unit

The measurement unit of the parameters referred to temperature or pressure depends on the parameters dEU, CF and PMU.

**NOTE:** The controller automatically converts values of set points and parameters referred to the pressure/temperature when the dEU parameter is changed. In any case check the value of the parameters referred to temperature and pressure after changing dEU.

- dEU: Selection of the kind of measurement unit: pressure or temperature**  
**dEU = tMP:** the parameters referred to pressure/temperature will be expressed in temperature according to the value of the CF parameter (°C or °F)  
**dEU = PrS:** the parameters referred to pressure/temperature will be expressed in pressure according to the value of the PMU parameter (bar, PSI or KPA)
- CF Measurement unit for temperature:** it is used only with dEU = tMP, and it set the measurement unit for parameters referred to temperature/pressure.  
 °C = Celsius degree  
 °F = Fahrenheit degree
- PMU Measurement unit for pressure:** it is used only with dEU = PrS, and it set the measurement unit for parameters referred to temperature/pressure.  
**bar** = bar  
**PSI** = PSI  
**PA** = kPA
- rES Resolution for °C and bar (in = integer; dE= decimal point)**
- dFE Pressure filter enabling: YES** = enabled; **no** = not enabled; This filter takes in account the average value of the pressure during the last cycle for the regulation.
- dEU1 Default visualization for upper display: PrS= Pressure; tPr= temperature**
- dSP2 Probe selection for lower display: nu** = display switched off - **P1** = Probe 1 - **P2** = Probe 2 - **P3** = Probe 3 - **P4** = Probe 4 - **StC1** = Compressor Set Point - **StC2** = NOT SET IT - **SetF** = Fan set point
- dEU2 Default visualization for lower display: PrS= Pressure; tPr= temperature**

## 17.5 Compressor regulation

- Pbd:** **Proportional band or neutral zone width** (0.1÷5.0bar/0.5÷30°C or 1÷150PSI/1÷50°F)  
The band (or zone) is symmetrical compared to the target set point, with extremes: set-Pbd/2 ÷ set+Pbd/2. It is used as proportional band for PI algorithm.  
The measurement unit depends on the dEU, CF, PMU par.
- rS** **Proportional band offset:** PI band offset. It permits to move the proportional band of the PI. With **rS=0** the band is between Set-Pbd/2 ÷ Set+Pbd/2;
- inC** **Integration time:** (0 ÷ 999s) PI integration time
- dGSP** **Digital compressor always activated at first:**  
**no:** other compressors if available are allowed to start when the digital compressor is locked by safety timers. This allows the system to satisfy the cooling demand when the digital compressor is unavailable.  
**yES:** the digital compressor is always started as first. If unavailable due to safety timers the regulation will be locked till timers will be over.
- SUt** **Start up time:** The digital scroll valve is energized for the SUt when the compressor starts (0÷3s)
- tdS** **Digital scroll cycle time:** (10÷40s) it sets the cycle time for the digital scroll (DGS) valve modulation.
- PM** **DGS minimum capacity** (10÷PMA with dGt=ScrL; 0÷PMA = dGt=StrM): it sets the minimum capacity allowed to the digital compressor.  
**If digital SCROLL is used dGt = ScrL the allowed range is 10÷PMA**  
**If digital STREAM is used dGt = StrM the allowed range is 0÷PMA**
- PMA** **DGS maximum power** (PM÷100) it sets the maximum capacity allowed to the DGS
- ton** **DGS at maximum PMA capacity before starting a new load** (0÷255s)
- toF** **DGS at minimum PM capacity before stopping a load** (0÷255s)
- MinP** **Minimum allowed DGS capacity for poor lubrication monitoring** (0÷100%; with 0 function excluded) If the DGS compressor works for the tMin time with a capacity (in percentage) equal or lower than MinP, it is forced to work at 100% for the tMAS time in order to restore the right lubrication.
- tMin** **Maximum DGS functioning time at a capacity lower than MinP, before working at full capacity (PMA)** (1÷255min)
- tMAS** **Time of DGS functioning at maximum capacity (PMA) to restore the right lubrication** (1÷255min)
- ESC** **Energy saving value for compressors:** (-20÷20bar; -50÷50°C) this value is add to the compressor set point.
- onon:** **Minimum time between 2 following switching ON of the same compressor** (0÷255 min).
- oFon:** **Minimum time between the switching off of a compressor and the following switching on.** (0÷255min). **Note:** usually onon is greater than oFon.
- don:** **Time delay between the insertion of two different compressors** (0÷99.5min; res. 10s).
- doF:** **Time delay between switching off of two different compressors** (0÷99.5 min; res. 10s)
- donF:** **Minimum time a stage stays switched ON** (0÷99.5 min; res. 10s)
- Maon** **Maximum time for compressor ON** (0 ÷ 24 h; with 0 this function is disabled.) If a compressor keeps staying on for the MAon time, it's switched off and it can restart after the oFon standard time.
- FdLy:** **“don” delay enabled also for the first call.** If enabled, the triggering of the step is delayed for a “don” value, respect to the call. (**no** = “don” not enabled; **yES**=“don” enabled)
- FdLF** **“doF” delay enabled also for the first switching off.** It enables the “doF” delay between the request of a release and the actual switching off. (**no** = “doF” not enabled; **yES**=“doF” enabled)
- odo:** **Regulation delay on start-up:** (0÷255s) on switching ON the instrument starts working after the time delay imposed in this parameter.

- LSE: Minimum set point:** The measurement unit depends on dEU parameter. It sets the minimum value that can be used for the set point, to prevent the end user from setting incorrect values.
- HSE: Maximum set point:** The measurement unit depends on dEU parameter. It sets the maximum acceptable value for set point.

## 17.6 Liquid injection thermostat

- Lit: Set point ( °C) for cooling injection thermostat** (0 ÷ 150°C) The reference probe is the P3, the thermostat relay is given by the relay set as **oAi = Lin**.
- Lid: Differential for cooling injection thermostat** (0.1 ÷ 10.0) The reference probe is set by LiPr parameter
- LiPr Probe for cooling injection thermostat:**  
**nP:** function disabled  
**P3:** probe P3 (term. 38-42)  
**P4:** probe P4 (term. 22-23)

## 17.7 Fans regulation

- Pb Proportional band zone width** (00.10÷5.00bar/0.5÷30°C or 1÷80PSI/1÷50°F).  
**Set the dEU par. and the target set point for fans before setting this parameter.** The band is symmetrical compared to the target set point, with extremes: SETF+Pb/2 ÷ SETF -Pb/2. The measurement unit depends on the dEU par.
- ESF Energy saving value for fans:** (-20÷20bar; -50÷50°C) this value is add to the fans set point.
- Fon: Time delay between the insertion of two different fans** (0÷255sec).
- FoF: Time delay between switching off of two different compressors** (0÷255 sec)
- LSF: Minimum set point for fan:** The measurement unit depends on dEU parameter. It sets the minimum value that can be used for the set point, to prevent the end user from setting incorrect values.
- HSF: Maximum set point for fan:** The measurement unit depends on dEU parameter. It sets the maximum acceptable value for set point.

## 17.8 Alarms – compressor section

- PAo: Alarm probe exclusion at power on.** it is the period starting from instrument switch on, before an alarm probe is signaled. (0÷255 min). During this time if the pressure is out of range all the compressor are switched on.
- LAL: Low pressure (temperature) alarm – compressor section:** The measurement unit depends on dEU parameter: (PA04 ÷ HAL bar; -50.0÷HAL °C; PA04÷HAL PSI; -58÷HAL °F) It's **independent** from the set point. When the value **LAL** is reached the A03C alarm is enabled, (possibly after the **tAo** delay time).
- HAL: High pressure (temperature) alarm– compressor section:** The measurement unit depends on dEU parameter: (LAL ÷ PA20 bar; LAL÷150.0 °C; LAL÷PA20 PSI; LAL÷302 °F). It's **independent** from the set point. When the value **HAL** is reached the A04C alarm is enabled, (possibly after the **tAo** delay time).
- tAo: Low and High pressure (temperature) alarms delay– compressor section:** (0÷255 min) time interval between the detection of a pressure (temperature) alarm condition and alarm signaling.
- ELP Electronic pressure switch threshold:** (-50°C÷SETC; -58°F÷SETC; PA04÷SETC); Pressure / Temperature value at which all the compressors are switched off. It has to be set some degrees above the mechanical low pressure switch value, in order to prevent mechanical low pressure activation.
- SER: Service request:** (1÷9990 hours, res. 10h) number of running hours after that the “A14” maintenance call is generated.
- PEn: Low pressure-switch intervention numbers:** (0÷15). If the low pressure-switch is enabled PEn times in the PEI interval, the controller is locked. **Only the manually**

**unlocking is possible.** See also the alarms table at paragraph 18.4. Every time the pressure-switch is enabled all the compressor are turned off.

- PEI:** **Pressure-switch interventions time** (0÷15 min) Interval, linked to the Pen parameter, for counting interventions of the low pressure-switch..
- SPr:** **number of steps engaged with faulty probe.** (0÷#compr).

## 17.9 Alarms – DLT section

- dtL** **DGS discharge line alarm temperature** (alarm always referred to P3 probe) (0÷180°C; 32÷356°F). If the probe 3 is used to detect the temperature of the discharge line of the DGS compressor, the compressor is switched off when this threshold is reached.
- dLd** **DGS discharge line temperature alarm delay** (alarm always referred to P3 probe) (0÷15min)
- dLH** **DGS discharge line alarm reset differential** (alarm always referred to P3 probe) (0.1÷25.5°C; 1÷50°F)
- dtLi** **Probe selection for the discharge line temperature monitoring:**  
**nP:** function disabled  
**P3:** probe P3 (term. 38-42)  
**P4:** probe P4 (term. 22-23)
- dtLP** **Digital Compressor Capacity percentage in case of discharge line temperature alarm** (0÷80%; with 0 the compressor is stopped)

## 17.10 Alarms – fans section

- LAF:** **Low pressure alarm – fans section:** The measurement unit depends on the dEU parameter: (FA04 ÷ HAF bar; -50.0÷HAF °C; FA04÷HAF PSI; -58÷HAF °F) It's independent from the set point. When the value LAF is reached the LA2 alarm is enabled, (possibly after the **AFd** delay time).
- HAF:** **High pressure alarm – fans section:** The measurement unit depends on the dEU parameter: (LAF÷FA20 bar; LAF÷150.0 °C; LAF÷FA20 PSI; LAF÷302 °F). It's independent from the set point. When the value HAF is reached the HA2 alarm is enabled, (possibly after the **AFd** delay time).
- AFd:** **Low and High pressure alarms delay – fans section:** (0÷255 min) time interval between the detection of a pressure alarm condition in the fans section and alarm signaling.
- HFC** **Compressors off with high pressure (temperature) alarm for fans**  
**no** = compressors are not influenced by this alarm  
**yES** = compressors are turned off in case of high pressure (temperature) alarm of fans
- HFdP** **Digital Compressor Capacity percentage in case of high condenser pressure (temperature) alarm** (0÷80%; with 0 the compressor is stopped)
- dHF** **Interval between 2 compressors turning off in case of high pressure (temperature) alarm for fans** (0 ÷ 255 sec)
- PnF:** **High pressure-switch intervention numbers – fans section:** (0÷15 with 0 the manually unlocking is disabled) if the high pressure-switch is enabled PnF times in the PiF interval, the controller is locked. **It can be unlocked only manually.** See paragraph 18.4. Every time the pressure-switch is enabled all the compressors are turned off and all the fans are turned on.
- PiF:** **Pressure-switch interventions time – fans section** (1÷15 min) Interval, linked to the PEn parameter, for counting interventions of the high pressure-switch..
- FPr** **Number of fans engaged with faulty probe.** (0÷#fans).

## 17.11 Suction superheat

- ASHO** **Differential for low superheat pre-alarm.** (0.1 to 30.0°C/ 1 to 60°F).

The low superheat pre-alarm warning is sent when the superheat (SH) is lower than ASH2 (low superheat alarm threshold) + ASH0, possibly after the ASH1 delay.

**ASH1 Delay for signalling low superheat pre-alarm** (0÷255sec)

If the superheat is below the ASH2+ASH0 threshold for ASH1 time the low superheat pre-alarm warning is sent.

**ASH2 Low suction superheat alarm threshold** (0.1÷15.0°C/ 1÷30°F). With SH < ASH2 the low superheat alarm is sent, possibly after the ASH3 delay

**ASH3 Delay for signalling low superheat alarm** (0÷255sec)

If the superheat is below the ASH2 threshold for ASH3 time the low superheat alarm message is sent.

**ASH4 Switching off compressors with low superheat alarm** (No, Yes)

ASH4 = no: compressors keep on working even with low superheat alarm.

ASH4 = yES: compressors are stopped in case of low superheat alarm.

**ASH5 Differential to restart regulation after of low superheat alarm with compressor stop** (0.1 to 15.0°C/ 1 to 30°F). In case of regulation stop (ASH4= yES), it restarts when SH > ASH2+ASH5

**ASH6 Delay to restart regulation after superheat > ASH2+ASH5** (0÷255 min). If the regulation is stopped because of low superheat alarm, it can restart when SH>ASH2+ASH5 for the ASH6 time.

**ASH7 Superheat value to enable hot gas injecting valve** (0.1 to 15.0°C/ 1 to 30°F)

With a relay set as hot gas injection valve, (oA2 or oA3 or oA4 = HG<sub>i</sub>), the relay is on with SH < ASH7 – ASH8.

**ASH8 Differential for ASH7** (0.1 to 30.0°C/ 1 to 60°F)

**ASH9 Probe selection for superheat monitoring** (nP, P3, P4)

ASH9 = nP no superheat control

ASH9 = P3 the probe to calculate the superheat (SH) is the probe P3 (term. 38-42)

ASH9 = P4 the probe to calculate the superheat (SH) is the probe P4 (term. 22-23). In this case also the parameter **P4C** must be set as **nt10** or **nt86**.

## 17.12 Dynamic set point for fan

**dSEP Dynamic set point reference probe**

nP = no probe: dynamic set point disabled;

P1= P1 probe


P2= P2 probe

P3= P3 probe

**dSES External temperature value to start dynamic regulation** (-50÷150°C; -58÷302 °F)

**dSEb External band width for dynamic set point** (-50.0 ÷ 50.0°C; -90 ÷ 90°F)

**dSEd Set point differential for dynamic set point:** (-20.0÷20.0°C; -50.0÷50.0PSI; -300÷300°F)

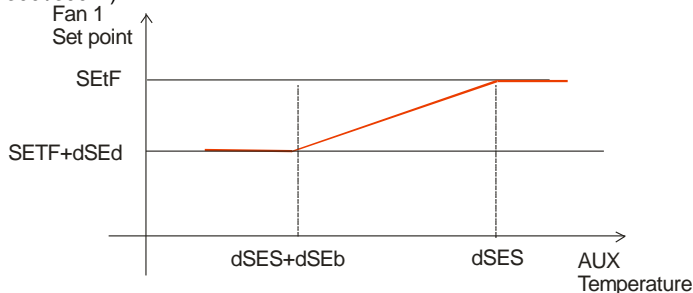

## 17.13 Analog outputs (optional)

**AoC Analog output setting**

tEn = 0÷10V output

- cUr = 4-20mA output
- AOF Analog output function**  
 nu = analog output disabled;  
 Inc1= To drive inverter for suction frequency compressor ;  
 Inc2 = not set it  
 inF= to drive ECI fan or inverter for fan  
 FrE = "Free", proportional to the probe P3 and P4.
- AOP Probe for analog output:** It is used only if AOP=FrE  
 nP = no probe;  
 P3= Probe 4  
 P4= Probe 3
- LAO Temperature value associated to minimum value of analog output (AOM)**  
 (-50.0÷150.0°C, -58÷302°F).
- UAO Temperature value associated to the maximum value of analog output, 10V or 20mA** (-50.0÷150.0°C, -58÷302°F).
- AOM Minimum value for analog output (0÷100%)**
- AOt Time of analog output at max after the start (0÷15s)**
- MPPM Maximum % variation per minute:** (nu; 1÷100)  
 nu = not used: function disabled  
 1÷100 = it sets the maximum percentage variation per minute of the analog output.
- SAO Percentage of analog output in case of probe failure:** (0 ÷ 100%)
- AOH Maximum analog output percentage when silence mode function is enabled (0÷100)**
- 2AoC Analog output 2 setting**  
 tEn = 0÷10V output  
 cUr = 4-20mA output
- 2AOF Analog output 2 function**  
 nu = analog output 2 disabled;  
 Inc1= To drive inverter for suction frequency compressor ;  
 Inc2 = not set it  
 inF= to drive ECI fan or inverter for fan  
 FrE = "Free", proportional to the probe P3 and P4.
- 2AOP Probe for analog output 2:** It is used only if AOP=FrE  
 nP = no probe;  
 P3= Probe 4  
 P4= Probe 3
- 2LAO Temperature value associated to minimum value of analog output 2 (2AOM)**  
 (-50.0÷150.0°C, -58÷302°F).
- 2UAO Temperature value associated to the maximum value of analog output 2, 10V or 20mA** (-50.0÷150.0°C, -58÷302°F).
- 2AOM Minimum value for analog output 2 (0÷100%)**
- 2AOt Time of analog output 2 at max after the start (0÷15s)**
- 2MPPM Maximum % variation per minute for analog output 2:** (nu; 1÷100)  
 nu = not used: function disabled  
 1÷100 = it sets the maximum percentage variation per minute of the analog output.
- 2SAO Percentage of analog output 2 in case of probe failure:** (0 ÷ 100%)
- 2AOH Maximum analog output 2 percentage when silence mode function is enabled (0÷100)**

## 17.14 Other

- tbA Alarm relay silencing:** by pushing one of the keypad buttons. **no**= alarm relay stays on; **yES**= alarm relay is switched off by pushing any keys.
- OAP Alarm relay output polarity:** **cL**=closed when activated; **oP**= opened when activated
- oFF Switching ON/OFF enabling from keyboard:** (**no** = disabled; **yES**= enabled) It permits the switching ON/OFF of the instrument by pressing the SET key for more than 4s.
- bUr Buzzer enabling**

**no** = the buzzer is not used in case of alarm

**yES** = buzzer is used in case of alarm

**Adr:** **Serial address** (1 –247) It is used in monitoring system.

**rEL** **Software release** for internal use.

**Ptb** **Parameter table code:** readable only.

**Pr2** **Access to Pr2 parameter level**


# 18. Type of regulation

## 18.1 DIGITAL COMPRESSOR REGULATION


### 18.1.1 *Digital scroll: main parameters set up*

EG: Plant with 2 compressors (one of them digital) e 2 fans default configuration with PP11, PP30 pressure transducers:

|           |             |            |            |             |
|-----------|-------------|------------|------------|-------------|
| oA1 = dGS | oA2 = CPR1, | oA3 = FAN, | oA4 = FAN, | dGty = SCrL |
|-----------|-------------|------------|------------|-------------|

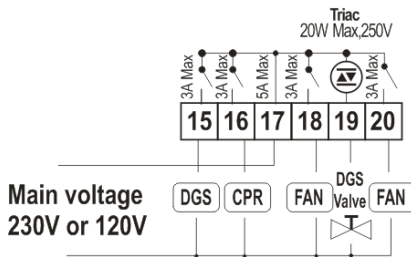

The pressure is adjusted by a PI regulation.

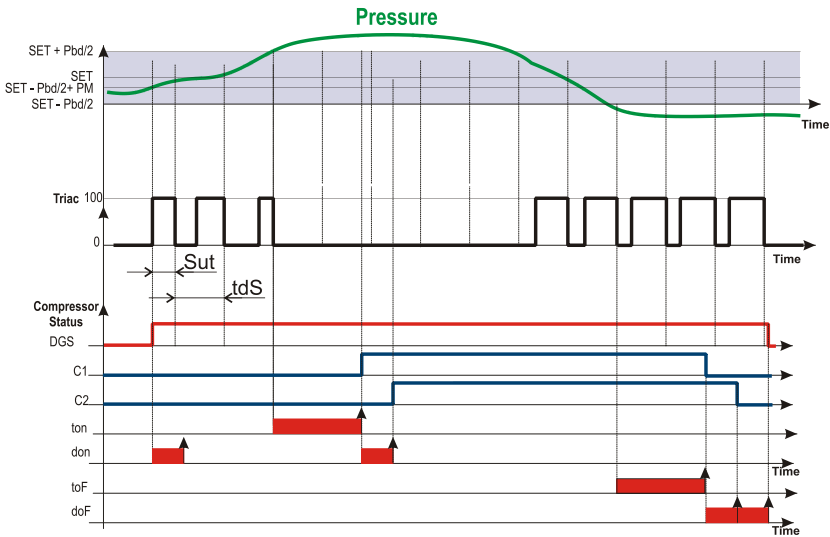

### 18.1.2 *Regulation Start: increasing capacity*

- The regulation starts when the suction pressure (temperature) increases and reaches the value  $\frac{SET - Pbd/2 + (Pbd \cdot PM)}{100}$ . At first, if available, the digital compressor is powered, and it is modulated in PWM mode.



**NOTE:** At start up the valve is energized for  $S_{Ut}$  seconds.

- b. Within the adjustment range ( $SET - Pbd/2 \div SET + Pbd/2$ ) the digital scroll compressor is activated in PWM mode in accordance with the value of the control variable. (NOTE: When the TRIAC is on the compressor is discharged; when the TRIAC is off the compressor is operative).
- c. When the pressure is greater than  $[SET + Pbd/2]$  and the TRIAC output is already at maximum, another compressor is started after the "ton" delay time.
- d. Then, if additional capacity is required (pressure higher than  $[SET + Pbd/2]$ ) another compressor starts after the "don" time.

**NOTE:** If the pressure exceeds the value  $SET + Pbd/2$  and the DGS compressor is not available (blocked by onon, oFon, safety digital input), another compressor is started (if available) in order to meet the adjustment request.


### ***18.1.3 Decreasing capacity and regulation stop***

- a. When the pressure is lower than  $[SET - Pbd/2]$ , the DGS compressor is still modulated to minimum capacity for the toF time
- b. At the end of the toF time the load with more working hours is shut down. If the load must stay on because the donF time is not over yet, the next load is considered, and so on until a load that can be shut down is found or becomes available.
- c. This procedure continues with all active loads, with the shutdowns spaced out by the doF time setting.
- d. When only the DGS remains on, at the end of the doF time the DGS is shut down too.


### 18.1.4 Digital Stream: Main parameters set up

EG: Plant with 2 compressors Stream 6D and 2 fans default configuration with PP11, PP30 pressure transducers:

|           |           |            |            |             |
|-----------|-----------|------------|------------|-------------|
| oA1 = dGS | oA2 = 6dG | oA3 = FAN, | oA4 = FAN, | dGty = StrM |
|-----------|-----------|------------|------------|-------------|

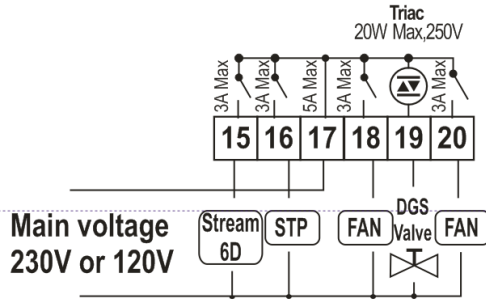


The pressure is adjusted by a PI regulation, following the same logic of the digital scroll see previous paragraphs: 18.1.2 **Error! Reference source not found.** and 18.1.3.

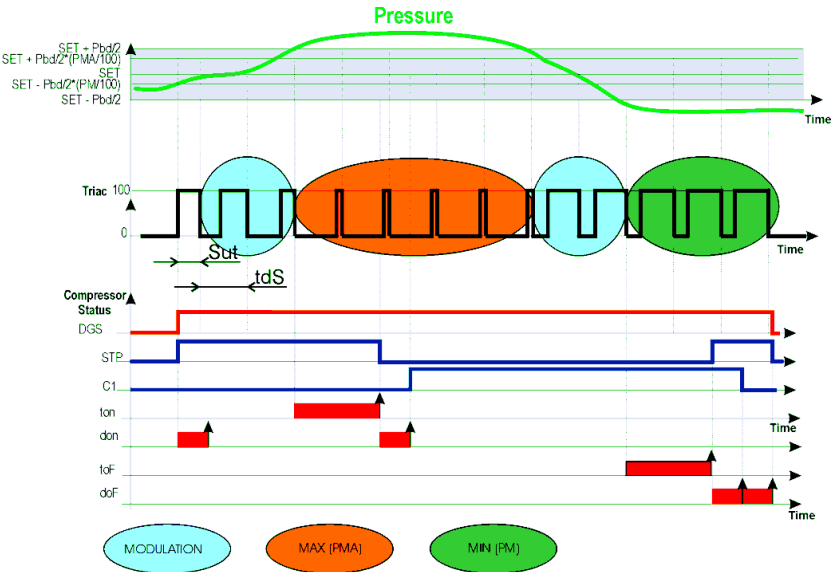

### 18.1.5 Limitation of DGS compressor capacity by parameters PM and PMA

The capacity of the DGS compressor can be limited by the PM and PMA parameters, as shown in the following diagram.

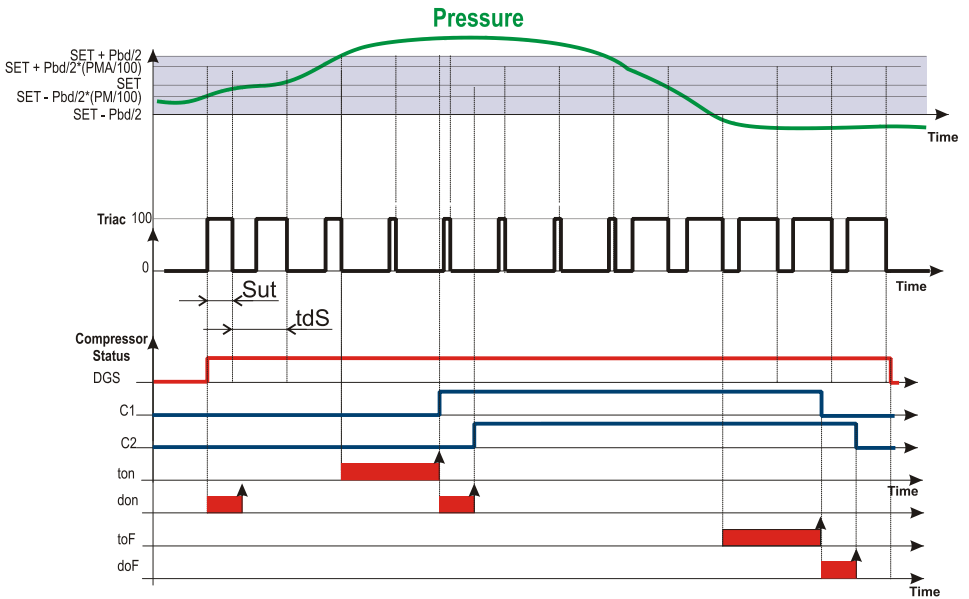

The capacity of the DGS compressor is limited by the PM and PMA parameters, where

**PM: in percentage, it sets the minimum capacity of the DGS activation during a period  $tdS$ .** For instance with  $tdS = 20s$  and  $PM = 20$ , the minimum activation of the DGS is 4s.

**NOTE**

**For digital scroll (dGty = SCrL) the minimum allowed value of **PM** is 10**

**For digital stream (dGty = StrM) the minimum allowed value of **PM** is 0**

**NOTE:** for a proper functioning of the DGS, it's recommend a minimum activation time of 2s.

**PMA: it limits the percentage of the DGS activation during a  $tdS$  period according to the formula:  $((Pbd * PMA) / 100) * tdS$ .**

## 18.2 Proportional Band regulation - only for fans

The fan regulation band **Pb** is divided by the number of fans:

The numbers of fans switched ON is proportional to the value of the input signal: when this distances itself from the target set point and enters the various bands, the compressors are switched ON, to be then turned OFF when the signal brings near the set point.


In this way if the pressure is greater than regulation band, all the fans are on, if the pressure (temperature) is lower than the regulation band all the fans are off. Naturally also for this regulations all the delays (Fon and FoF) are valid.

### Regulation according to the running hours

The algorithm switch on and off the loads according to the running hours of each load. In this way the running hours are balanced.

#### Example

4 Fans: oA2 = FAn; oA3 = FAn; oA4 = FAn; oA6 = FAn;  
rot = yES rotation enabled

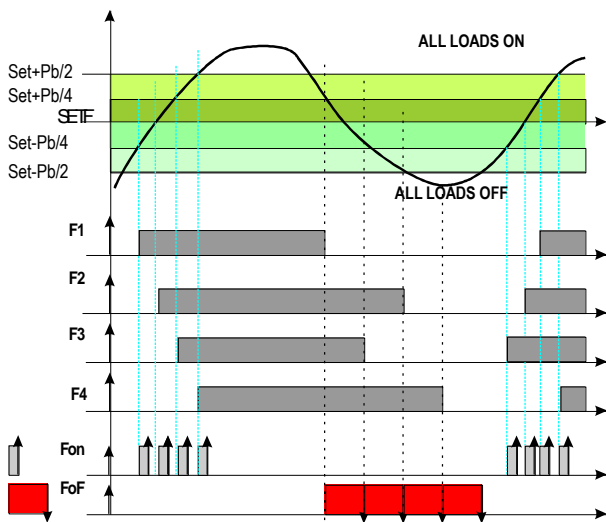

## 18.3 Condenser with Inverter or Ec Fans–Analog Output Setting

This configuration is used when all fans of the condensing group are ECI fans or driven by one inverter or a chopped phase driver.


The capacity used by the inverter is proportional to the delivery pressure value inside the regulation band ( $SETF-Pb/2 \div SETF+Pb/2$ ).

### 18.3.1 Condenser fan configurations and Parameters

| Parameter          | Description                                  | Action  |
|--------------------|--|---|
| <b>oA(i) = inF</b> | Set 1 relay for inverter                     | One relay is used to enable the action of the inverter.   |
| <b>oAC = tEn</b>   | Analog output setting                        | Set the output as 0-10V   |
| <b>oAF = InF</b>   | Analog output function                       | Set the output to drive ECI or inverter fan   |
| <b>AOM = 0</b>     | Minimum value for analog output              | The minimum voltage is 0V.<br><b>NOTE:</b> verify on the inverter of ECI fan of chopped phase driver that with this input a proper output is supplied to the fan. |
| <b>AOt = 5</b>     | Time of analog output at max after the start | To start the fan the controller supplies 10V output for 5s, then starts standard regulation   |
| <b>MPM = 100</b>   | Maximum % variation per minute               | The analog output takes 1 min to move from the min to the maximum   |

### 18.3.2 How to set it

Parameters involved: **oA(i) = inF**; **oAC = tEn**, **oAP = P2**, **AOM = 30**, **MPM = 100**

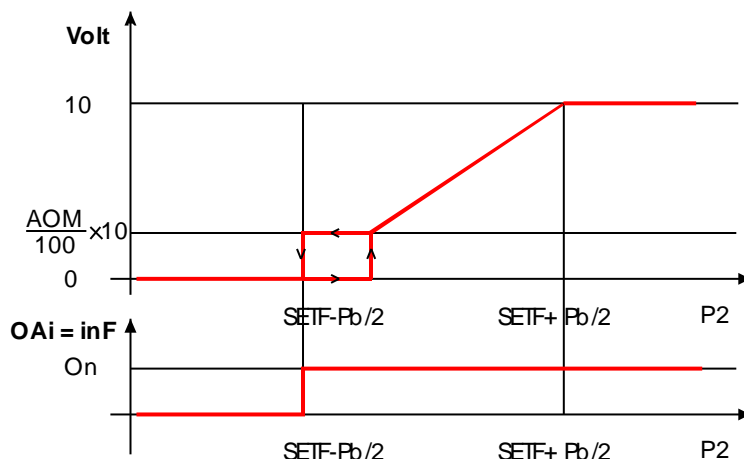

- If required, set a relay to drive the invert (is used to signal to the inverter to start and stop the regulation), by setting: **oA(i) = inF** inverter for fans
- Set the kind of signal of the analog output current (4-20ma) or voltage (0-10V) by the **Analog output setting** parameter "**oAC**": **tEn** = 0÷10V output; **cUr** = 4-20mA output
- Set the function of the analog output: **oAF = InF**
- Set the time of the analog output at max after start up EI: **Aot = 3s**
- Set the max % variation per min (MP)
- At last set also the percentage of analog output in case of probe failure: (0 ÷ 100%)**SAO**

## 18.4 Analog output “free”


This setting is used to link the analog output 1 to a temperature probe. The analog output will take values proportional to the temperatures detected by the probe P3 or P4, according to the setting.

### 18.4.1 Analog output “free” configurations and Parameters

| Parameter        | Description  | Action  |
|------------------|--|---|
| <b>AoC = tEn</b> | Analog output setting  | Set the output as 0-10V   |
| <b>AoF = FrE</b> | Analog output function   | Set the output to drive for instance a de-superheater   |
| <b>AOP = P3</b>  | Reference probe for the analog output 1 (used only if AOP=FrE)           | It's possible to set only P3 or P4 probes. P3 must be set as temperature probe: P3C = nt10 (NTC 10K) or nt86 (NTC 86K)  |
| <b>LAO = 20</b>  | Temperature value associated to minimum value of analog output AOM.      | It's the start scale of the analog output   |
| <b>UAO = 40</b>  | Temperature value associated to the maximum value of analog output (10V) | It's the end scale of the analog output   |
| <b>AOM = 0</b>   | Minimum value for analog output  | The minimum voltage is 0V.<br><b>NOTE:</b> verify on the inverter of ECI fan of chopped phase driver that with this input a proper output is supplied to the fan. |
| <b>AOt = 5</b>   | Time of analog output at max after the start                             | With AOt = 5 the controller supplies 10V output for 5s at fan start, then starts standard regulation  |
| <b>MPM = 100</b> | Maximum % variation per minute   | The analog output takes 1 min to move from the min to the maximum   |

### 18.4.2 How to set it

Parameters involved: AoC = tEn, AoF = FrE, AOP = P3; LAO = 20; UAO = 40; Aot = 0, AOM = 30, MPM = 100

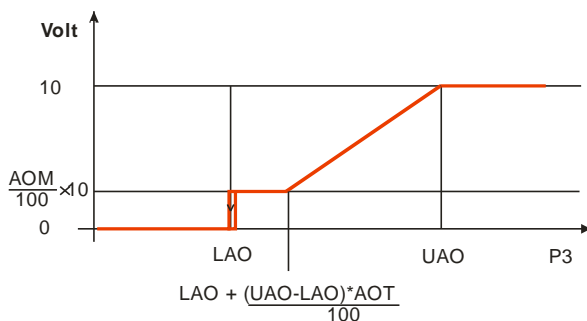

- Set the kind of signal of the analog output current (4-20ma) or voltage (0-10V) by the **Analog output setting** parameter “AoC”: tEn = 0÷10V output; cUr = 4-20mA output
- Set the function of the analog output: AoF = FrE
- Set the time of the analog output at max after start up EI: Aot = 3s
- Set the start scale temperature by LAO parameter, at which correspond the AOM value of analog output

- e. Set the end scale temperature by UAO parameter, at which correspond the maximum value of analog output
- f. Set the max % variation per min (MPM)
- g. At last set also the percentage of analog output in case of probe failure:  $(0 \div 100\%)SAO$

## 19. Additional functions

### 19.1 Compressor running proof function

The digital inputs are normally used to signal a compressor or fan failure  
 It's also possible to set the digital inputs for running proof signalling. That means when compressor relay is activated, after a configurable delay the digital input related to the compressor should goes on too (usually a contact from compressor contactor) and the controller has the "confirmation" that compressor is running.  
 If it doesn't, that means something is wrong between the controller and the compressor itself.

#### 19.1.1 Parameters and settings

The parameters involved are:

- **iF01, iF02, iF03, iF04, iF05, iF06, iF07**: configuration of dig input 1, 2, 3, 4, 5, 6, 7,

with the related polarity:

- **iP01, iP02, iP03, iP04, iP05, iP06, iP07**: polarity of digital input 1, 2, 3, 4, 5, 6, 7,

with the related delay before alarm signalling:

- **d1d, d2d, d3d, d4d, d5d, d6d**: delay before signalling alarm with digital input set respectively as **oA1 or Co1, oA2 or Co2, oA3 or Co3, oA4 or Co4, oA5 or Co5, oA6 or Co6**.

#### 19.1.2 Alarms related

| Label           | Meaning                                    | Reason   | Action  | Reset  |
|-----------------|--|--|---|--|
| FC01...<br>FC06 | Running proof alarm with automatic recover | The digital input set as Co1.. Co6 has not been activated by d1d, ... d4d time | The compressor 1..6 is switched off and the safety timers start | Automatic – when safety timers are over  |
| LC01...<br>LC06 | Running proof alarm with manual recover    | 5 running proof alarms happened in a hour.                                     | The compressor 1..4 is switched off                             | Manual by means:<br>- Controller off-on<br>- Reset by keyboard<br>- Reset by monitoring system |

#### 19.1.3 Example

**EI**: Rack with 2 compressors, with compressor safeties and running proof circuit for each compressor:

Compressor 1 on relay 1: **oA1 = CPr1**

Compressor 2 on relay 2: **oA2 = CPr1**

Safety for compressor 1 on digital input 1: **iF01 = oA1**

Safety for compressor 2 on digital input 2: **iF02 = oA2**

Running proof circuit for compressor 1 on digital input 3: **iF03 = Co1**

Running proof circuit for compressor 2 on digital input 4: **iF04 = Co2**

2 seconds delay before signalling alarm and stopping the compressor 1: **d1d = 2**

2 seconds delay before signalling alarm and stopping the compressor 2: **d2d = 2**

When the compressor 1 (or 2) starts, if by 2sec the digital input 3 (or 4) is not activated (running proof function) the **FC01** alarm is signalled and the compressor is stopped.

Alarm recover as soon as the safety timers of the compressor (onon, ofon) are over and compressor come back available for regulation.


After 5 consecutive alarms, the alarms move from automatic restart to manual restart and it must be reset by Keyboard, or by switching off and on the controller.

## 19.2 Flood protection function

To ensure the maximum safety of the plant, a relay is activated when the compressors can't be switched on since they are blocked due to safety times or for other issues or stopped for maintenance.

This output can be used to block the liquid injection to the cabinets to avoid to flood the suction collectors.

The relay will be disabled once the compressors can restart (see scheme 1).

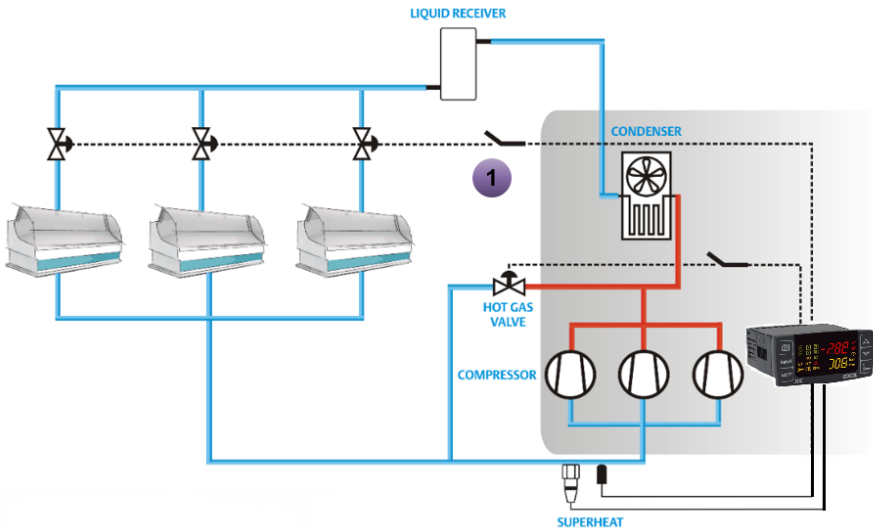

To enable this function set one relay by the parameters **oA2** or **oA3** or **oA4** or **oA5** or **oA6**, as flood protection, EI **oA4 = Liq**, and then connect it to the external device that blocks the cabinet injection.

NOTE: the relay set as flood protection is automatically activated even when the controller is in stand-by mode.

### NOTE

If the compressors are activated in fix sequence, (Sty = no), and the compressor that has to be activated is locked by safety timers, the relay set as flood protection is switched on till the safety timers are over.




## 19.3 Suction superheat monitoring

Controller can monitor the suction superheat, and signal situations of low superheat, with a pre-alarm and alarm thresholds.

According to the settings, compressors can be stopped in case of low superheat alarm, to preserve compressor integrity.

### 19.3.1 Suction Superheat detecting

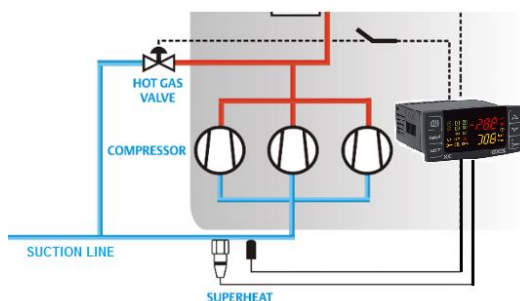

To detect the suction superheat an auxiliary probe among P3 (term. 3-4) or P4 (term. 33-34) has to be set as superheat temperature probe.

To do this set ASH9 = P3 or P4.

Controller automatically calculates the suction superheat using the value of the suction probe P1 and the probe set in the parameter ASH9.

The SH is available after 1 minute since at least one compressor is running.

### 19.3.2 Low superheat signalling and actions

Controller can signal low superheat pre-alarm, only warning, and low superheat alarm, warning and regulation according to parameter ASH4.

The alarm messages and the regulation are described in the following table

| Label | Meaning                 | Cause  | Action   | Recovery   |
|-------|-------------------------|--|--|--|
| PrSH  | Low superheat Pre-alarm | The superheat is less than: $SH < ASH2 + ASH0$ for ASH1 time | Only warning   | <b>Automatic:</b><br>when superheat: $SH > ASH0 + ASH2 + 1^{\circ}C(2^{\circ}F)$ |
| ALSH  | Low superheat allarm    | The superheat is less than: $SH < ASH2$ for ASH3 time        | Regulation depends on ASH4:<br>ASH4 = no: regulation not affected.<br>ASH4 = yes: regulation is stopped. | <b>Automatic:</b><br>when superheat: $SH > ASH5 + ASH2$                          |

## 19.4 Hot gas injection valve

Controller can manage a hot gas injection valve to increase suction superheat. See above figure.

### 19.4.1 Parameters

A **relay** must be set as hot gas valve: **oA2** or **oA3** or **oA4** or **oA5** or **oA6**= HGi, and an **auxiliary probe** among P3 (term. 3-4) or P4 (term. 33-34) has to be set as superheat temperature probe **ASH9 = P3 or P4**.

Then the following parameters:

**ASH7 Superheat value to enable hot gas injecting valve** (0.1 to 15.0°C/ 1 to 30°F)

**ASH8 Differential for ASH7** (0.1 to 30.0°C/ 1 to 60°F)

### 19.4.2 Regulation:

The regulation respects the following schema:

|                                |   |                          |
|--------------------------------|---|--------------------------|
| Superheat < ASH7 – ASH8        | → | HGi on                   |
| Superheat > ASH7               | → | HGi off                  |
| ASH7 < Superheat < ASH7 – ASH8 | → | The state is maintained. |

### 19.4.3 Special conditions

- With **ASH9 = nP**: none probe set as SH probe and one relays set as HGi (valve for hot gas injection) the configuration error is displayed “**no Probe For SH**”, and the relay set as HGi is never activated..
- If the probe used to calculate the SH is in error the related probe fault alarm is generated (P3 or P4) and the HGi relay is not activated.

## 20. Alarm list

Usually alarm conditions are signaled by means of:

1. Activation of alarm output 0-12V
2. Buzzer activation
3. Message on proper display
4. Log of alarm: code and duration.

The table at paragraph 20.3

## 20.1 Types of alarms and signaling managed

### 20.1.1 A12: Configuration alarm

The following configuration parameters are checked after each modification.:

|                 |                            |
|-----------------|----------------------------|
| <b>OA2+ OA6</b> | Outputs 2- 6 configuration |
| <b>P2P</b>      | Second probe presence.     |
| <b>AOP</b>      | Probe for analog output    |

When these parameters are set in wrong way an alarm message is generated: the label **A12** is shown on the upper display, while the lower display the following messages are shown:

| <b>Mess.</b>                       | <b>Errata</b>   | <b>Corrige</b>   |
|------------------------------------|---|--|
| <b>Too Many dGS output</b>         | More than one oAi has been set as dGs (digital scroll)                              | <ul style="list-style-type: none"> <li>Check the oAi parameters and set them different from dGS.</li> </ul>  |
| <b>Too Many dGS output</b>         | One oAi has been set as dGst (triac for digital scroll)                             | <ul style="list-style-type: none"> <li>Check the oAi parameters and set them different from dGS.</li> </ul>  |
| <b>Too Many 6dG output</b>         | More than one oAi has been set as 6dG (blocked suction valve for digital stream 6D) | <ul style="list-style-type: none"> <li>Check the oAi parameters and set them different from 6dG.</li> </ul>  |
| <b>6dG bEForE dGS ConFIg Error</b> | oAi configured as 6dG before the dGS  | <ul style="list-style-type: none"> <li>Check the oAi parameters and set 6dG after dGS.</li> </ul>  |
| <b>dGS output Error</b>            | One oAi has been set as dGst (triac for digital scroll)                             | <ul style="list-style-type: none"> <li>Check the oAi parameters and set them different from dGS.</li> </ul>  |
| <b>dGS not PrESEnt</b>             | One oAi has been set as dGs (digital scroll)  | <ul style="list-style-type: none"> <li>Check the oAi parameters and set them different from dGS.</li> </ul>  |
| <b>dGS not PrESEnt</b>             | One oAi has been set as dGst (triac for digital scroll)                             | <ul style="list-style-type: none"> <li>Check the oAi parameters and set them different from dGS.</li> </ul>  |
| <b>StEP ConFIg Error</b>           | Load (step) configuration error   | <ul style="list-style-type: none"> <li>A relay oA(i) has been set as compressor without a previous relay oA(i-1) has been set as compressor. EI oA1 = StP</li> </ul>   |
| <b>no P3 Probe PrESEnt</b>         | The P3 probe is requested for a function, but it's not present                      | <ul style="list-style-type: none"> <li>Check the parameters P3C</li> </ul>   |
| <b>no LoAdS For rEGuLation</b>     | None oA(i) is set as compressors or fans  | <ul style="list-style-type: none"> <li>Check the setting of oA2, oA3, oA4, oA6 parameters</li> </ul>   |
| <b>AOP2</b>                        | P2 probe not available for the 4÷20mA output  | <ul style="list-style-type: none"> <li>P2 probe not available P2P =no. Enable the probe setting: P2P =yES</li> <li>The second probe P2 is used to control the temperature of the engine of screw compressors. Check CtyP and set it different from Scr.</li> </ul> |
| <b>no FAn Probe</b>                | P2 probe not available for fan regulation   | <ul style="list-style-type: none"> <li>P2 probe not available P2P =no. Enable the probe setting: P2P =yES</li> <li>The second probe P2 is used to control the temperature of the engine of screw compressors. Check CtyP and set it different from Scr.</li> </ul> |
| <b>too MAnY InC1</b>               | More than one oAi has been set as inC1 (inverter for suction 1)                     | <ul style="list-style-type: none"> <li>Check the oAi parameters and set only 1 as "inC1".</li> </ul>   |
| <b>No AnALoGuE out For InC1</b>    | None analogue output has been set as "inC1"   | <ul style="list-style-type: none"> <li>Check AoF and 2AoF and set one of them as "inC1"</li> </ul>   |
| <b>too MAnY InF</b>                | More than one oAi has been set as inF (inverter for fan)                            | <ul style="list-style-type: none"> <li>Check the oAi parameters and set only 1 as "inF".</li> </ul>  |
| <b>No AnALoGuE out For InF</b>     | None analogue output has been set as "inF"  | <ul style="list-style-type: none"> <li>Check AoF and 2AoF and set one of them as "inF"</li> </ul>  |

| Mess.                            | Errata   | Corrige  |
|----------------------------------|--|--|
| <b>CPr Circuit conFIG Error</b>  | The kind of outputs are not compatible with the 2 suction circuits   | <ul style="list-style-type: none"> <li>Check parameters <b>oA(i)</b> , <b>CtyP</b> and <b>set CtyP different from Scr.</b></li> </ul>  |
| <b>AO1 And AO2 SAME Function</b> | AoF and 2AoF have the same setting   | <ul style="list-style-type: none"> <li>Set AoF and 2AoF properly.</li> </ul>   |
| <b>no Probe For SH</b>           | One relay is set as hot gas injection valve (oA2 or oA3 or oA4 = HGi), but the probe to detected th superheat is missed:<br><b>ASH9 = nP</b> | <ul style="list-style-type: none"> <li>Set a probe to detect the superheat by the parameter <b>ASH9 = P3 or P4.</b></li> <li>If the hot gas injection valve is not present, set oA2 or oA3 or oA4 different from HGi.</li> </ul> |

### 20.1.2 E01L, Electronic Pressure switch alarm, suction section

#### Parameters

**ELP: Electronic pressure switch threshold:** (-50°C÷SETC; -58°F÷SETC; PA04÷SETC); Pressure / Temperature value at which all the compressors are switched off. It has to be set some degrees above the mechanical low pressure switch value, in order to prevent mechanical low pressure activation.

#### Actions

**Electronic low pressure:** every time the suction temperature/pressure is less than ELP value all the compressors are switched off. The instrument restarts the standard operating mode when pressure/ temperature increases.

### 20.1.3 E0H1, E0L1 Pressure switch alarm, suction and condensing sections

#### Terminals

Low pressure switch input: 9-10, high pressure switch input: HP [25-26].

#### Parameters

**iP05: Low pressure switch polarity:** It establishes if the input is activated by closing (iP05=cL) or by opening (iP05=oP) the terminals.

**iP06: High pressure switch polarity:** It establishes if the input is by activated by closing (iP06=cL) or by opening (iP06=oP) the terminals.

#### Actions

**Low pressure:** every time the inputs are activated all the compressors are switched off. The instrument restart the standard operating mode when the input is disabled. If there are PEN activation in the PEi time, only manual resetting is allowed, by pressing the **DOWN** key for 3s or by turning off and on the instrument.

**High pressure:** every time the inputs are activated all the compressors are switched off and fans are switched on. The instrument restart the standard operating mode when the input is disabled. If there are PnF activation in the PiF time, only manual resetting is allowed, by pressing the **DOWN** key for 3s or by turning off and on the instrument.

### 20.1.4 EA1÷EA6: Compressors and fans safeties alarm.

#### Terminals

**WARNING: THESE TERMINALS REQUIRE A FREE OF VOLTAGE CONNECTION.**

The terminals (from 10, 11, 12, 13, 14+ ID5) really used depends on the number of loads. The protections regarding the compressors and fans are connected to these inputs. If one of these protections is enabling (E.I. for lack of oil or overheating, etc.) the corresponding load is turn off.

#### **Parameters**

**ALIP:** It establishes if the input is activated by closing (ALIP=cL) or by opening (ALIP=oP) the terminals.

#### **Actions**

Every time one input is activated the corresponding output is turned off.

#### **Recovery**

Recovery depends on **ALMr** parameter:

With **ALMr = no** The instrument restart the standard operating mode when the input is disabled.

With **ALMr = yES** manual recover for the alarms of compressors and fans. Push the **DOWN** key for 3s.

### **20.1.5 P1, P2; P3, P4: probe failure alarm**

It is generated by failure in the probe P1, P2 or P3.

In case of **P1** fault, number of steps engaged depends on the **SPr** parameter

In case of **P2** fault, number of fans engaged depends on the **FPr** parameter

#### **If the P3 or P4 probe is used for dynamic set point**

The function is disabled and only the standard set point is used.

#### **If the P3 or P4 probe is used for analog output**

The function is disabled, the value of the analog output is set in the **SAo** parameter.

#### **Recovery**

Automatic as soon as probe restarts working.

### **20.1.6 CIHA, CILA, F-HA, F-LA High and low pressure (temperature) alarms for compressors or fans**

This alarm signals that the pressure (temperature) is out of limits established by parameters **LAL** and **HAL** for compressors and **LAF –HAF** for fans.

The **tAo** and **AFd** parameters set the delay between alarm condition and alarm signaling.

#### **Action**

The alarm is signaled with standard action. The outputs are unchanged.

## **20.2 Buzzer muting**

Press any buttons to silence the buzzer during an alarm condition.

Hold pressed for more than 3 seconds switch off the alarm relay during an alarm condition

## 20.3 Alarm conditions – summary table

| Code | Description                                 | Cause                                    | Action  | Reset  |
|------|---|--|---|--|
| E1L  | <b>Low electronic pressure-switch alarm</b> | Pressure/temperature less than ELP value | All compressors are turned off. Fans unchanged.   | <b>Automatically when</b> the pressure/temperature increases more than ELP value   |
| E0L1 | <b>Low pressure-switch alarm</b>            | Low pressure switch input enabled        | All compressors are turned off. Fans unchanged.   | <p><b>Automatically</b> (if the number of activation are less than PEn in the PEi time) when the input is disable.</p> <ul style="list-style-type: none"> <li>- The compressors restarts working according to the working algorithm.</li> </ul> <p><b>Manually</b> (if PEn activation happened in the PEi time)<br/>When the input is disable:</p> <ol style="list-style-type: none"> <li>a. hold pressed the <b>Restart(DOWN)</b>key for 3s or</li> <li>b. turn off and on the instrument..</li> </ol> <ul style="list-style-type: none"> <li>- The compressors restarts working according to the working algorithm.</li> </ul> |
| E0H  | <b>High pressure switch alarm</b>           | High pressure switch input enabled       | <ul style="list-style-type: none"> <li>- All compressors are turned off.</li> <li>- All fans are turned on.</li> </ul>      | <p><b>Automatically</b> (if the number of activation are less than PEn in the PEi time) when the input is disable.</p> <ul style="list-style-type: none"> <li>- Compressors and fans restart working according to the working algorithm.</li> </ul> <p><b>Manually</b> (if PEn activation happened in the PEi time)<br/>When the input is disable:</p> <ul style="list-style-type: none"> <li>- hold pressed the <b>Restart(DOWN)</b> key for 3s or</li> <li>- turn off and on the instrument.</li> </ul> <p>Compressors and fans restarts working according to the working algorithm.</p>                                       |
| P1   | <b>P1 probe failure alarm</b>               | Probe failure or out of range            | <ul style="list-style-type: none"> <li>- The compressors are activated according to the SPPr or PoPr parameters.</li> </ul> | <b>Automatically</b> as soon as the probe restarts working.  |
| P2   | <b>P2 probe failure alarm</b>               | Probe failure or out of range            | <ul style="list-style-type: none"> <li>- The fans are activated according to the FPr parameters.</li> </ul>                 | <b>Automatically</b> as soon as the probe restarts working.  |
| P3   | <b>P3 probe failure alarm</b>               | Probe failure or out of range            | <ul style="list-style-type: none"> <li>- The functions related to the third probe are disabled.</li> </ul>                  | <b>Automatically</b> as soon as the probe restarts working.  |
| P4   | <b>P4 probe failure alarm</b>               | Probe 4 failure or out of range          | <ul style="list-style-type: none"> <li>- The functions related to the fourth probe are disabled.</li> </ul>                 | <b>Automatically</b> as soon as the probe restarts working.  |

| Code                            | Description  | Cause  | Action   | Reset  |
|---------------------------------|--|--|--|--|
| EA1<br>EA2<br>EA3<br>EA4<br>EA6 | Load safeties alarm                                      | Safeties compressor/fan input activation.<br>NOTE: with step compressors 1 input for each compressor has to be used. | – the corresponding load is turned off. (with step compressors all relays referred to the input are disabled). | Recovery depends on <b>ALMr</b> parameter:<br>With <b>ALMr = no</b> The instrument restart the standard operating mode when the input is disabled.<br>With <b>ALMr = yES</b> manual recover for the alarms of compressors and fans. Push the <b>DOWN</b> key for 3s. |
| C1-LA                           | Minimum pressure (temperature) alarm compressors section | Suction pressure or temperature lower than LAL value   | – signaling only   | <b>Automatically:</b> as soon as the pressure or temperature reaches the (LAL+ differential) value. (differential = 0.3bar or 1°C)   |
| F-LA                            | Minimum pressure (temperature) alarm fans section        | Condensing pressure or temperature lower than LAF value  | – signaling only   | <b>Automatically:</b> as soon as the pressure or temperature reaches the (LAF+ differential) value. (differential = 0.3bar or 1°C)   |
| C1-HA                           | Maximum pressure (temperature) alarm compressors section | Suction pressure or temperature higher than HAL value  | – signaling only   | <b>Automatically:</b> as soon as the pressure or temperature reaches the (HAL - differential) value. (differential = 0.3bar or 1°C)  |
| F-HA                            | Maximum pressure (temperature) alarm fans section        | Condensing pressure or temperature higher than HAF value   | – Depends on the parameter HFC   | <b>Automatically:</b> as soon as the pressure or temperature reaches the (HAF - differential) value. (differential = 0.3bar or 1°C)  |
| A5                              | Liquid level alarm                                       | Input enabled  | – signaling only   | <b>Automatically</b> as soon as the input is disabled  |
| A12                             | Configuration alarms                                     | See par. 18.1  | –  |  |
| A14                             | Load maintenance alarm                                   | A load has worked for the hour set in the SEr parameter  | - signaling only   | <b>Manually:</b> reset the running hour of the compressor (see par.13 <b>Running hours of loads</b> )  |
| dTL                             | Discharge Line Temperature                               | Pb3 Temperature Higher than <b>dTL</b> for the <b>dLd</b> time delay   | Digital Scroll switched off  | <b>Automatically</b> as soon as the temperature becomes lower than <b>dTL</b> .  |
| inF                             | Inverter fan alarm                                       | The configurable dig. Input set as inF is activated  | The analog out set as INF is switched off  | <b>Automatically</b> as soon as the input is disabled  |
| FC01<br>...<br>FC04             | Running proof alarm with automatic recover               | The digital input set as Co1.. Co6 has not been activated by d1d, ... d4d time                                       | The compressor 1..4 is switched off and the safety timers start  | <b>Automatic – when safety timers are over</b>   |
| LC01<br>...<br>LC06             | Running proof alarm with manual recover                  | 5 running proof alarms happened in a hour.   | The compressor 1..4 is switched off  | <b>Manual by means:</b><br>- <b>Controller off-on</b><br>- <b>Reset by keyboard</b><br>- <b>Reset by monitoring system</b>   |

| Code | Description             | Cause   | Action   | Reset  |
|------|-------------------------|---|--|--|
| PrSH | Low superheat Pre-alarM | The superheat is less than: SH< ASH2 + ASH0 for ASH1 time | Only warning   | Automatic:<br>when superheat:<br>SH>ASH0+ASH2+1°C(2°F) |
| ALSH | Low superheat allarm    | The superheat is less than: SH< ASH2 for ASH3 time        | Regulation depends on ASH4:<br>ASH4 = no: regulation not affected.<br>ASH4 = yes: regulation is stopped. | Automatic:<br>when superheat:<br>SH> ASH5 + ASH2       |



## 21. Technical features

**Housing:** Self extinguishing ABS.

**Case:** Front panel 32x74 mm, depth 70mm ("CX" format);

**Mounting:** "CX" format panel mounting in a 29x71 mm panel cut-out

**Protection:** IP20.

**Frontal protection:** IP65.

**Connections:** Removable terminal block 6 and 14 ways;

**Power supply:** 12Vac/dc  $\pm 10\%$ , 24Vac/dc  $\pm 10\%$ , 50-60Hz.

**Power absorption:** 5VA max.

**Display:** 4 digits red led and 4 digit orange led.

**Inputs** up to 4 NTC probes, or up to 3 4÷20mA or up to 0.5÷4.5Vdc transducer.

**Digital inputs:** 7 free voltage. Max distance 10m

**Relay outputs:** 4 relay SPST, Rating according to the UL60730

Resistive 3A, 240VAC 50K cycles

Inductive (G.P.) 3A, 240VAC 30K cycles

Motor Load 240VAC, 1/8 hp (1.9FLA/11.4LRA), 30K cycles

Pilot Duty 180VA, 240VAC 30K cycles

**Triac output:** Pilot Duty 9÷20W, 24Vac and 830mA max

Pilot Duty 9÷20W, 230Vac and 87mA max

**oA6 open collector:** output: 12V, 40mA max.

**Analogue output:** 2 x 4÷20mA or 0÷10V, SELV, Limited Energy circuit <15W,

**Serial output :** TTL standard **Communication protocol:** ModBus – RTU

**Data storing:** on the non-volatile memory (EEPROM).

**Kind of action:** 1B; **Pollution grade:** normal; **Software class:** A.

**Operating temperature:** -10÷60 °C.; **Storage temperature:** -25÷60 °C.

**Relative humidity:** 20÷85% (no condensing)

**Measuring range: NTC probe:** -40÷110°C.

**Resolution:** 0,1 °C; 1°F; 0.1bar; 1 PSI;

**Accuracy (ambient temp. 25°C):**  $\pm 0,7$  °C  $\pm 1$  digit

## 22. Parameters – Default values

| Label | Value | Menu | Description                                   | Range   |
|-------|-------|------|---|---|
| StC1  | -10.0 | Pr1  | Set point for compressors                     | LSE÷HSE   |
| SEtF  | 30.0  | Pr1  | Set point for fans                            | LSF÷HSF   |
| OA1   | dGS   | Pr2  | Load 1 configuration                          | nu - CPr1 - CPr2 - StP - dGS - 6dG - dGS - InC1 - InC2 - FAn - InF - LIn - ALr - Liq - HGi  |
| OA2   | CPr1  | Pr2  | Load 2 configuration                          | nu - CPr1 - CPr2 - StP - dGS - 6dG - dGS - InC1 - InC2 - FAn - InF - LIn - ALr - Liq - HGi  |
| OA3   | FAn   | Pr2  | Load 3 configuration                          | nu - CPr1 - CPr2 - StP - dGS - 6dG - dGS - InC1 - InC2 - FAn - InF - LIn - ALr - Liq - HGi  |
| OA4   | FAn   | Pr2  | Load 4 configuration                          | nu - CPr1 - CPr2 - StP - dGS - 6dG - dGS - InC1 - InC2 - FAn - InF - LIn - ALr - Liq - HGi  |
| OA6   | Alr   | Pr2  | Load 4 configuration                          | nu - CPr1 - CPr2 - StP - dGS - 6dG - dGS - InC1 - InC2 - FAn - InF - LIn - ALr - Liq - HGi  |
| dGty  | SCrL  | Pr2  | Kind of digital compressor : Scroll or Stream | SCrL - StrM   |
| StP   | oP    | Pr2  | Valve output polarity                         | OP - CL   |
| FtyP  | 404   | Pr2  | Refrigerant gas type                          | r22= R22; r134=134, r404=R404A; - 407A = r407A; 407C= r407C; 407F= r407F; 410= r410; 507=R507; CO2= CO2; r32 = r32; r290 = r290; r448 = r448A; r449 = r449A, r450 = r450A, r513= r513; 1234 = r1234ze |
| Sty   | yES   | Pr2  | Compressor rotation                           | no - yES  |
| rot   | yES   | Pr2  | Fan rotation                                  | no - yES  |
| P1C   | Cur   | Pr2  | P1 probe setting (4/20mA, 0-5V, ntc)          | nP - Cur - tEn - ntc  |
| PA04  | -0.5  | Pr2  | 4mA or 0.5V readout for P1 probe              | (-1.0 ÷ PA20)BAR; (-15 ÷ PA20)PSI; (-100 ÷ PA20)KPA   |
| PA20  | 11.0  | Pr2  | 20mA or 4.5V readout for P1 probe             | (PA04 ÷ 61.0)BAR; (PA04 ÷ 885)PSI; (PA04 ÷ 6100)KPA   |
| CAL   | 0.0   | Pr2  | P1 probe offset                               | -12.0÷12.0(°C); -20÷20 (°F); 12.0÷12.0 (bar);<br>- 200÷200 (PSI) -999÷999 (kPA)   |
| P2C   | Cur   | Pr2  | P2 probe setting (4/20mA, 0-5V, ntc)          | nP - Cur - tEn - ntc  |
| FA04  | 0.0   | Pr2  | 4mA or 0.5V readout for P2 probe              | (-1.0 ÷ FA20)BAR; (-15 ÷ FA20)PSI; (-100 ÷ FA20)KPA   |
| FA20  | 30.0  | Pr2  | 20mA or 4.5V readout for P2 probe             | (PA04 ÷ 61.0)BAR; (PA04 ÷ 885)PSI; (PA04 ÷ 6100)KPA   |
| FCAL  | 0.0   | Pr2  | P2 probe offset                               | -12.0÷12.0(°C); -20÷20 (°F); 12.0÷12.0 (bar);<br>- 200÷200 (PSI) -999÷999 (kPA)   |
| P3C   | nP    | Pr2  | P3 probe setting (4/20mA, 0-5V, ntc)          | nP - Cur - tEn - nt10 - nt86  |
| 3P04  | -0.5  | Pr2  | 4mA or 0.5V readout for P3 probe              | (-1.0 ÷ FA20)BAR; (-15 ÷ FA20)PSI; (-100 ÷ FA20)KPA   |
| 3P20  | 11.0  | Pr2  | 20mA or 4.5V readout for P3 probe             | (PA04 ÷ 61.0)BAR; (PA04 ÷ 885)PSI; (PA04 ÷ 6100)KPA   |
| O3    | 0.0   | Pr2  | P3 probe offset                               | -12.0÷12.0(°C); -20÷20 (°F); 12.0÷12.0 (bar);<br>- 200÷200 (PSI) -999÷999 (kPA)   |
| P4C   | nP    | Pr2  | P4 probe setting (NTC 10K, NTC 86K)           | nP - nt10 - nt86  |
| O4    | 0.0   | Pr2  | P4 probe offset                               | -12.0÷12.0(°C); -20÷20 (°F)   |
| FPb   | P2    | Pr2  | Probe setting for fan                         | nP - P1 - P2 - P3   |

| Label       | Value | Menu | Description   | Range  |
|-------------|-------|------|---|--|
| <b>iF01</b> | oA1   | Pr2  | Configurable digital input 1 function (terminals 10-13) | nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL - Co1 - Co2 - Co3 - Co4 - Co5 - Co6 |
| <b>iF02</b> | oA2   | Pr2  | Configurable digital input 2 function (terminals 10-14) | nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL - Co1 - Co2 - Co3 - Co4 - Co5 - Co6 |
| <b>iF03</b> | oA3   | Pr2  | Configurable digital input 3 function (terminals 10-11) | nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL - Co1 - Co2 - Co3 - Co4 - Co5 - Co6 |
| <b>iF04</b> | oA4   | Pr2  | Configurable digital input 4 function (terminals 10-12) | nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL - Co1 - Co2 - Co3 - Co4 - Co5 - Co6 |
| <b>iF05</b> | LP1   | Pr2  | Configurable digital input 5 function (terminals 9-10)  | nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL - Co1 - Co2 - Co3 - Co4 - Co5 - Co6 |
| <b>iF06</b> | HP    | Pr2  | Configurable digital input 6 function (terminals 25-26) | nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL - Co1 - Co2 - Co3 - Co4 - Co5 - Co6 |
| <b>iF07</b> | LL    | Pr2  | Configurable digital input 7 function (terminals 27-28) | nu - OA1- OA2 - OA3 - OA4 - OA5 - OA6 - InF - LP1 - LP2 - HP - ES - OFF - LL - SIL - EAL - Co1 - Co2 - Co3 - Co4 - Co5 - Co6 |
| <b>iP01</b> | cL    | Pr2  | Digital input 1 polarity                                | OP - CL  |
| <b>iP02</b> | cL    | Pr2  | Digital input 2 polarity                                | OP - CL  |
| <b>iP03</b> | cL    | Pr2  | Digital input 3 polarity                                | OP - CL  |
| <b>iP04</b> | cL    | Pr2  | Digital input 4 polarity                                | OP - CL  |
| <b>iP05</b> | cL    | Pr2  | Digital input 5 polarity                                | OP - CL  |
| <b>iP06</b> | cL    | Pr2  | Digital input 6 polarity                                | OP - CL  |
| <b>iP07</b> | cL    | Pr2  | Digital input 7 polarity                                | OP - CL  |
| <b>d1d</b>  | 0     | Pr2  | Dig. input set as oA1 or Co1 activation delay           | 0 ÷ 255 (sec)  |
| <b>d2d</b>  | 0     | Pr2  | Dig. input set as oA2 or Co2 activation delay           | 0 ÷ 255 (sec)  |
| <b>d3d</b>  | 0     | Pr2  | Dig. input set as oA3 or Co3 activation delay           | 0 ÷ 255 (sec)  |
| <b>d4d</b>  | 0     | Pr2  | Dig. input set as oA4 or Co4 activation delay           | 0 ÷ 255 (sec)  |
| <b>d5d</b>  | 0     | Pr2  | Dig. input set as oA5 or Co5 activation delay           | 0 ÷ 255 (sec)  |
| <b>did</b>  | 20    | Pr2  | Liquid level alarm, signaling delay                     | 0 ÷ 255 (min.)   |
| <b>didA</b> | 20    | Pr2  | External alarm, signaling delay:                        | 0 ÷ 255 (min.)   |
| <b>ALMr</b> | no    | Pr2  | Manual reset for compressor/fan alarms                  | no - yES   |
| <b>dEU</b>  | tPr   | Pr2  | Displaying measurement unit: pressure or temperature    | tMP - PrS  |
| <b>CF</b>   | °C    | Pr2  | Measurement unit for temperature                        | °C - °F  |
| <b>PMU</b>  | Bar   | Pr2  | Measurement unit for pressure                           | Bar - PSI - PA   |
| <b>rES</b>  | dE    | Pr2  | Resolution for display and parameters                   | in - dE  |
| <b>dFE</b>  | no    | Pr2  | Pressure filter enabling                                | no - yES   |
| <b>dEU1</b> | tPr   | Pr2  | Upper display: pressure or temperature selection        | tMP - PrS  |
| <b>dSP2</b> | P2    | Pr2  | Lower display default visualization                     | nu - P1 - P2 - P3 - P4 - StC1 - StC2 - SEtF  |
| <b>dEU2</b> | tPr   | Pr2  | Lower display: pressure or temperature selection        | tMP - PrS  |
| <b>Pbd</b>  | 5.0   | Pr2  | Proportional band for compressors regulation            | 0.1÷30.0(°C); 1÷50 (°F); 0.1÷10.0(BAR); 1÷150(PSI) 10÷1000(KPA)  |
| <b>rS</b>   | 0.0   | Pr2  | Band offset   | -12.0÷12.0(°C) -20÷20(°F) -12.0÷12.0(BAR) -200÷ 200(PSI) -999÷999(KPA)   |
| <b>inC</b>  | 500   | Pr2  | Integral time   | 0 ÷ 999 sec  |
| <b>dGSP</b> | no    | Pr2  | Digital compressor always activated as first compressor | no - yES   |
| <b>SUt</b>  | 2     | Pr2  | Digital input valve on at start up                      | 0÷3s   |

| Label | Value | Menu | Description   | Range  |
|-------|-------|------|---|--|
| tdS   | 15    | Pr2  | Cycle time for digital compressor                                   | 10÷40s   |
| PM    | 30    | Pr2  | Minimum capacity for digital compressor                             | 10÷PMA(dGty=ScrL) 0÷PMA(dGty=StrM)   |
| PMA   | 100   | Pr2  | Maximum capacity for digital compressor                             | PM÷100   |
| ton   | 60    | Pr2  | Time with digital compr. at PMA value before starting a load        | 0÷255s   |
| toF   | 30    | Pr2  | Time with digital compr. at PM before turning off a load            | 0÷255s   |
| MinP  | 0     | Pr2  | Minimum capacity threshold to start the safety lubrication function | 0÷100  |
| tMin  | 180   | Pr2  | Max time at MinP to start the safety lubrication function           | 1÷255min   |
| tMAS  | 3     | Pr2  | Time at PMA for digital compressor to restore the right lubrication | 1÷255min   |
| ESC   | 0.0   | Pr1  | Energy saving for compressors regulation                            | -50.0÷50.0(°C) -90÷90(°F) -20.0÷20.0(BAR)<br>-300÷300(Psi) -2000÷2000(KPA) |
| OnOn  | 5     | Pr2  | Minimum delay between 2 switching on of the same compressor         | 0 ÷ 255 (min.)   |
| OFOOn | 1     | Pr2  | Delay between the switching off and on of the same compressor       | 0 ÷ 255 (min.)   |
| don   | 01:00 | Pr2  | Time delay between the insertion of two different loads             | 0 ÷ 99.5 (min.10sec)   |
| doF   | 00:30 | Pr2  | Time delay between switching off of two different compressors       | 0 ÷ 99.5 (min.10sec)   |
| donF  | 1:00  | Pr2  | Minimum time a stage stays ON                                       | 0 ÷ 99.5 (min.10sec)   |
| MAon  | 0     | Pr2  | Maximum time a stage stays switched ON                              | 0 ÷ 24 (hour)  |
| FdLy  | no    | Pr2  | 'don' delay enabled also for the first request                      | no - yES   |
| FdLF  | no    | Pr2  | 'doF' delay enabled also for the first switching off                | no - yES   |
| odo   | 20    | Pr2  | Regulation delay at power on  | 0 ÷ 255 (sec.)   |
| LSE   | -40.0 | Pr2  | Minimum set point (compressors)                                     | -50.0÷HSE(°C) -58.0÷HSE(°F)<br>PA04÷HSE(BAR,PSI,KPA)                       |
| HSE   | 10.0  | Pr2  | Maximum set point (compressors)                                     | LSE÷150.0(°C) LSE÷302(°F)<br>LSE÷PA20(BAR , PSI , KPA)                     |
| Lit   | 90.0  | Pr2  | Set point for liquid injection                                      | 0.0 ÷ 180.0(°C) 32 ÷ 356(°F)   |
| Lid   | 10.0  | Pr2  | Differential for liquid injection                                   | 0.1 ÷ 25.5(°C) 1 ÷ 50(°F)  |
| LiPr  | nP    | Pr2  | Probe selection for liquid injection                                | nP - P3 - P4   |
| Pb    | 5.0   | Pr2  | Proportional band for fan regulation                                | 0.1÷30.0(°C) 1÷50 (°F) 0.1÷10.0(BAR)<br>1÷150(Psi) 10÷1000(KPA)            |
| ESF   | 0.0   | Pr2  | Energy saving differential for fan regulation                       | -50.0÷50.0(°C) -90÷90(°F) -20.0÷20.0(BAR)<br>-300÷300(Psi) -2000÷2000(KPA) |
| PbES  | 0.0   | Pr2  | Band offset for fan regulation in ES                                | -50.0÷50.0(°C) -90÷90(°F) -20.0÷20.0(BAR)<br>-300÷300(Psi) -2000÷2000(KPA) |
| Fon   | 30    | Pr2  | Time delay between the insertion of two different fan               | 0 ÷ 255 (sec)  |
| FoF   | 15    | Pr2  | Time delay between switching off of two different fan               | 0 ÷ 255 (sec)  |
| LSF   | 10.0  | Pr2  | Minimum set point (fan)   | -50.0÷HSF(°C) -58.0÷HSF(°F)<br>FA04(FPB)÷HSF(BAR , PSI , KPA)              |
| HSF   | 50.0  | Pr2  | Maximum set point (fan)   | LSF÷150.0(°C) LSF÷302(°F) LSF÷FA20<br>(BAR , PSI , KPA)                    |
| PAO   | 30    | Pr2  | Alarm probe delay at power on                                       | 0 ÷ 255 (min.)   |
| LAL   | -40.0 | Pr1  | Pressure alarm set low limit (compressors)                          | -50.0÷HAL(°C); -58÷HAL(°F);<br>PA04÷HAL (BAR , PSI , KPA)                  |
| HAL   | 10.0  | Pr1  | Pressure alarm set high limit (compressors)                         | LAL÷150.0(°C); LAL÷302(°F);<br>LAL÷PA20(BAR , PSI , KPA)                   |

| Label | Value | Menu | Description  | Range  |
|-------|-------|------|--|--|
| tAo   | 15    | Pr1  | Pressure/temperature alarm delay (compressors)                                       | 0 ÷ 255 (min.)   |
| ELP   | -45.0 | Pr2  | Electronic pressure switch threshold   | -50.0÷STC1(°C) -58÷STC1(°F)<br>PA04÷STC1(BAR , PSI , KPA)                  |
| SEr   | 999   | Pr2  | Working hour alarm set (tenth of ours)   | 1 ÷ 999 (0= disabled) (10 hour)  |
| PEn   | 5     | Pr2  | Pressure switch maximum activations  | 0 ÷ 15   |
| PEI   | 60    | Pr2  | Pressure switch activations time   | 0 ÷ 255 (min.)   |
| SPr   | 1     | Pr2  | Compressors ON with faulty probe   | 0 ÷ 6  |
| dtL   | 110.0 | Pr2  | DLT high temperature alarm threshold   | 0÷180°C 32÷356°F   |
| dLd   | 5     | Pr2  | DLT high temperature alarm delay   | 0÷15min  |
| dLH   | 15.0  | Pr2  | DLT high temperature alarm differential for recovery                                 | 0.1÷25.5°C 1÷50°F  |
| dtLi  | nP    | Pr2  | Probe selection for DLT control  | nP - P3 - P4   |
| dtLP  | 50    | Pr2  | Digital Compressor Capacity percentage in case of discharge line temperature alarm   | 0÷80(%)  |
| LAF   | 0.0   | Pr1  | Low pressure alarm set (fan)   | -50.0÷HAF(°C); -58÷HAF(°F);<br>FA04÷HAF(BAR , PSI , KPA)                   |
| HAF   | 60.0  | Pr1  | High pressure alarm set (fan)  | LAF÷150.0(°C) LAF÷302(°F)<br>LAF÷FA20(BAR , PSI , KPA)                     |
| AFd   | 5     | Pr2  | Pressure alarm delay   | 0 ÷ 255 (min)  |
| HFc   | YES   | Pr2  | Compressor off with high pressure (temperature) alarm                                | no - yES   |
| HFdP  | 50    | Pr2  | Digital Compressor Capacity percentage in case of high pressure (temperature) alarm  | 0÷80(%)  |
| dHF   | 5     | Pr2  | Interval between 2 compressors turning off with high pressure (temperature) alarm    | 1÷24 (sec.)  |
| PnF   | 5     | Pr2  | Fan pressure switch maximum activations  | 0 ÷ 15   |
| PiF   | 60    | Pr2  | Fan pressure switch activations time   | 0 ÷ 255 (min)  |
| FPr   | 1     | Pr2  | Fan ON with faulty probe   | 0 ÷ 6  |
| ASH0  | 5     | Pr2  | Differential for low superheat pre-alarm   | 0.1 to 30.0°C/ 1 to 60°F   |
| ASH1  | 240   | Pr2  | Delay for signalling low superheat pre-alarm   | 0÷255 sec  |
| ASH2  | 5     | Pr2  | Low suction superheat alarm threshold  | 0.1÷15.0°C/ 1÷30°F   |
| ASH3  | 120   | Pr2  | Delay for signalling low superheat alarm   | 0÷255 sec  |
| ASH4  | no    | Pr2  | Switching off compressors with low superheat alarm                                   | No, Yes  |
| ASH5  | 5     | Pr2  | Differential to restart regulation after of low superheat alarm with compressor stop | 0.1÷15.0°C/ 1÷30°F   |
| ASH6  | 1     | Pr2  | Delay to restart regulation after superheat > ASH2+ASH5                              | 0÷255 min  |
| ASH7  | 10    | Pr2  | Superheat value to enable hot gas injecting valve                                    | 0.1÷30.0°C/ 1÷60°F   |
| ASH8  | 2     | Pr2  | Differential for ASH7  | 0.1÷15.0°C/ 1÷30°F   |
| ASH9  | nP    | Pr2  | Probe selection for superheat monitoring   | nP(0) - P3(1) - P4(2)  |
| dSEP  | nP    | Pr2  | Dynamic Set point function enabled   | nP - P3 - P4   |
| dSES  | 35.0  | Pr2  | External temperature set for DYNAMIC SET POINT function                              | -50.0 ÷ 150.0 (°C) -58 ÷ 302 (°F)  |
| dSEb  | -20.0 | Pr2  | Proportional band DYNAMIC SET POINT  | -50.0 ÷ 50.0(°C) -90 ÷ 90 (°F)   |
| dSEd  | 5.0   | Pr2  | Differential for DYNAMIC SET POINT   | -50.0÷50.0°C; -90÷90(°F) -20.0÷±20.0(BAR)<br>-300÷300(PSI) -2000÷2000(KPA) |
| AOC   | Cur   | Pr2  | Analogue output working mode   | Cur – tEn  |
| AOF   | nu    | Pr2  | Analog output 1 function   | nu - lnC1 – lnC2 – lnF   |
| AOP   | nP    | Pr2  | Reference probe for the analog output 1  | nP(0) - P3(1) - P4(2)  |
| LAO   | 0     | Pr2  | Temperature value associated to minimum value of analog output (AOM)                 | -50.0÷150.0(°C) -58÷302(°F)  |

| Label       | Value | Menù | Description   | Range                       |
|-------------|-------|------|---|-----------------------------|
| <b>UAO</b>  | 100   | Pr2  | Temperature value associated to the maximum value of analog output, 10V or 20mA   | -50.0÷150.0(°C) -58÷302(°F) |
| <b>AOM</b>  | 40    | Pr2  | Minimum value of analogue output  | 0 ÷ 100 (%)                 |
| <b>AOt</b>  | 5     | Pr2  | Time with analog output at max when after exceeding AOM                           | 0÷15s                       |
| <b>MPM</b>  | 100   | Pr2  | Maximum % variation per minute  | nu, 1 ÷ 100%                |
| <b>SAO</b>  | 80    | Pr2  | Percentage of analog output in case of probe failure                              | 0 ÷ 100 (%)                 |
| <b>AOH</b>  | 70    | Pr2  | Maximum analog output percentage when silence mode function is enabled            | 0 ÷ 100 (%)                 |
| <b>2AOC</b> | Cur   | Pr2  | Analogue output2 working mode   | Cur – tEn                   |
| <b>2AOF</b> | nu    | Pr2  | Analog output 2 function  | nu - lnC1 - lnC2 - lnF      |
| <b>2AOP</b> | nP    | Pr2  | Reference probe for the analog output 2   | nP(0) - P3(1) - P4(2)       |
| <b>2LAO</b> | 0     | Pr2  | Temperature value associated to minimum value of analog output2 (2AOM)            | -50.0÷150.0(°C) -58÷302(°F) |
| <b>2UAO</b> | 100   | Pr2  | Temperature value associated to the maximum value of analog output 2, 10V or 20mA | -50.0÷150.0(°C) -58÷302(°F) |
| <b>2AOM</b> | 0     | Pr2  | Minimum value of analogue output2   | 0 ÷ 100 (%)                 |
| <b>2AOt</b> | 0     | Pr2  | Time with analog output 2 at max when after exceeding AOM                         | 0÷15s                       |
| <b>2MPM</b> | 100   | Pr2  | Maximum % variation per minute for analog output 2                                | nu, 1 ÷ 100%                |
| <b>2SAO</b> | 50    | Pr2  | Percentage of analog output 2 in case of probe failure                            | 0 ÷ 100 (%)                 |
| <b>2AOH</b> | 70    | Pr2  | Maximum analog output 2 percentage when silence mode function is enabled          | 0 ÷ 100 (%)                 |
| <b>tbA</b>  | YES   | Pr1  | Alarm relay silencing   | no – yES                    |
| <b>OAP</b>  | cL    | Pr2  | Polarity alarm relay  | OP – CL                     |
| <b>oFF</b>  | no    | Pr2  | off function enabled  | no – yES                    |
| <b>bUr</b>  | YES   | Pr2  | Buzzer enabled  | no – yES                    |
| <b>Adr</b>  | 1     | Pr2  | Serial address  | 1 ÷ 247                     |
| <b>rEL</b>  | 3.4   | Pr2  | Release firmware  | Readable only               |
| <b>Ptb</b>  | -     | Pr2  | Parameter table code  | Readable only               |
| <b>Pr2</b>  | -     | Pr1  | Pr2 access  | Readable only               |

**Dixell**



Dixell S.r.l. - Z.I. Via dell'Industria, 27 - 32010 Pieve d'Alpago (BL) ITALY  
Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com