


XDL01 and PWDL: how to connect a Dixell instrument with serial output.

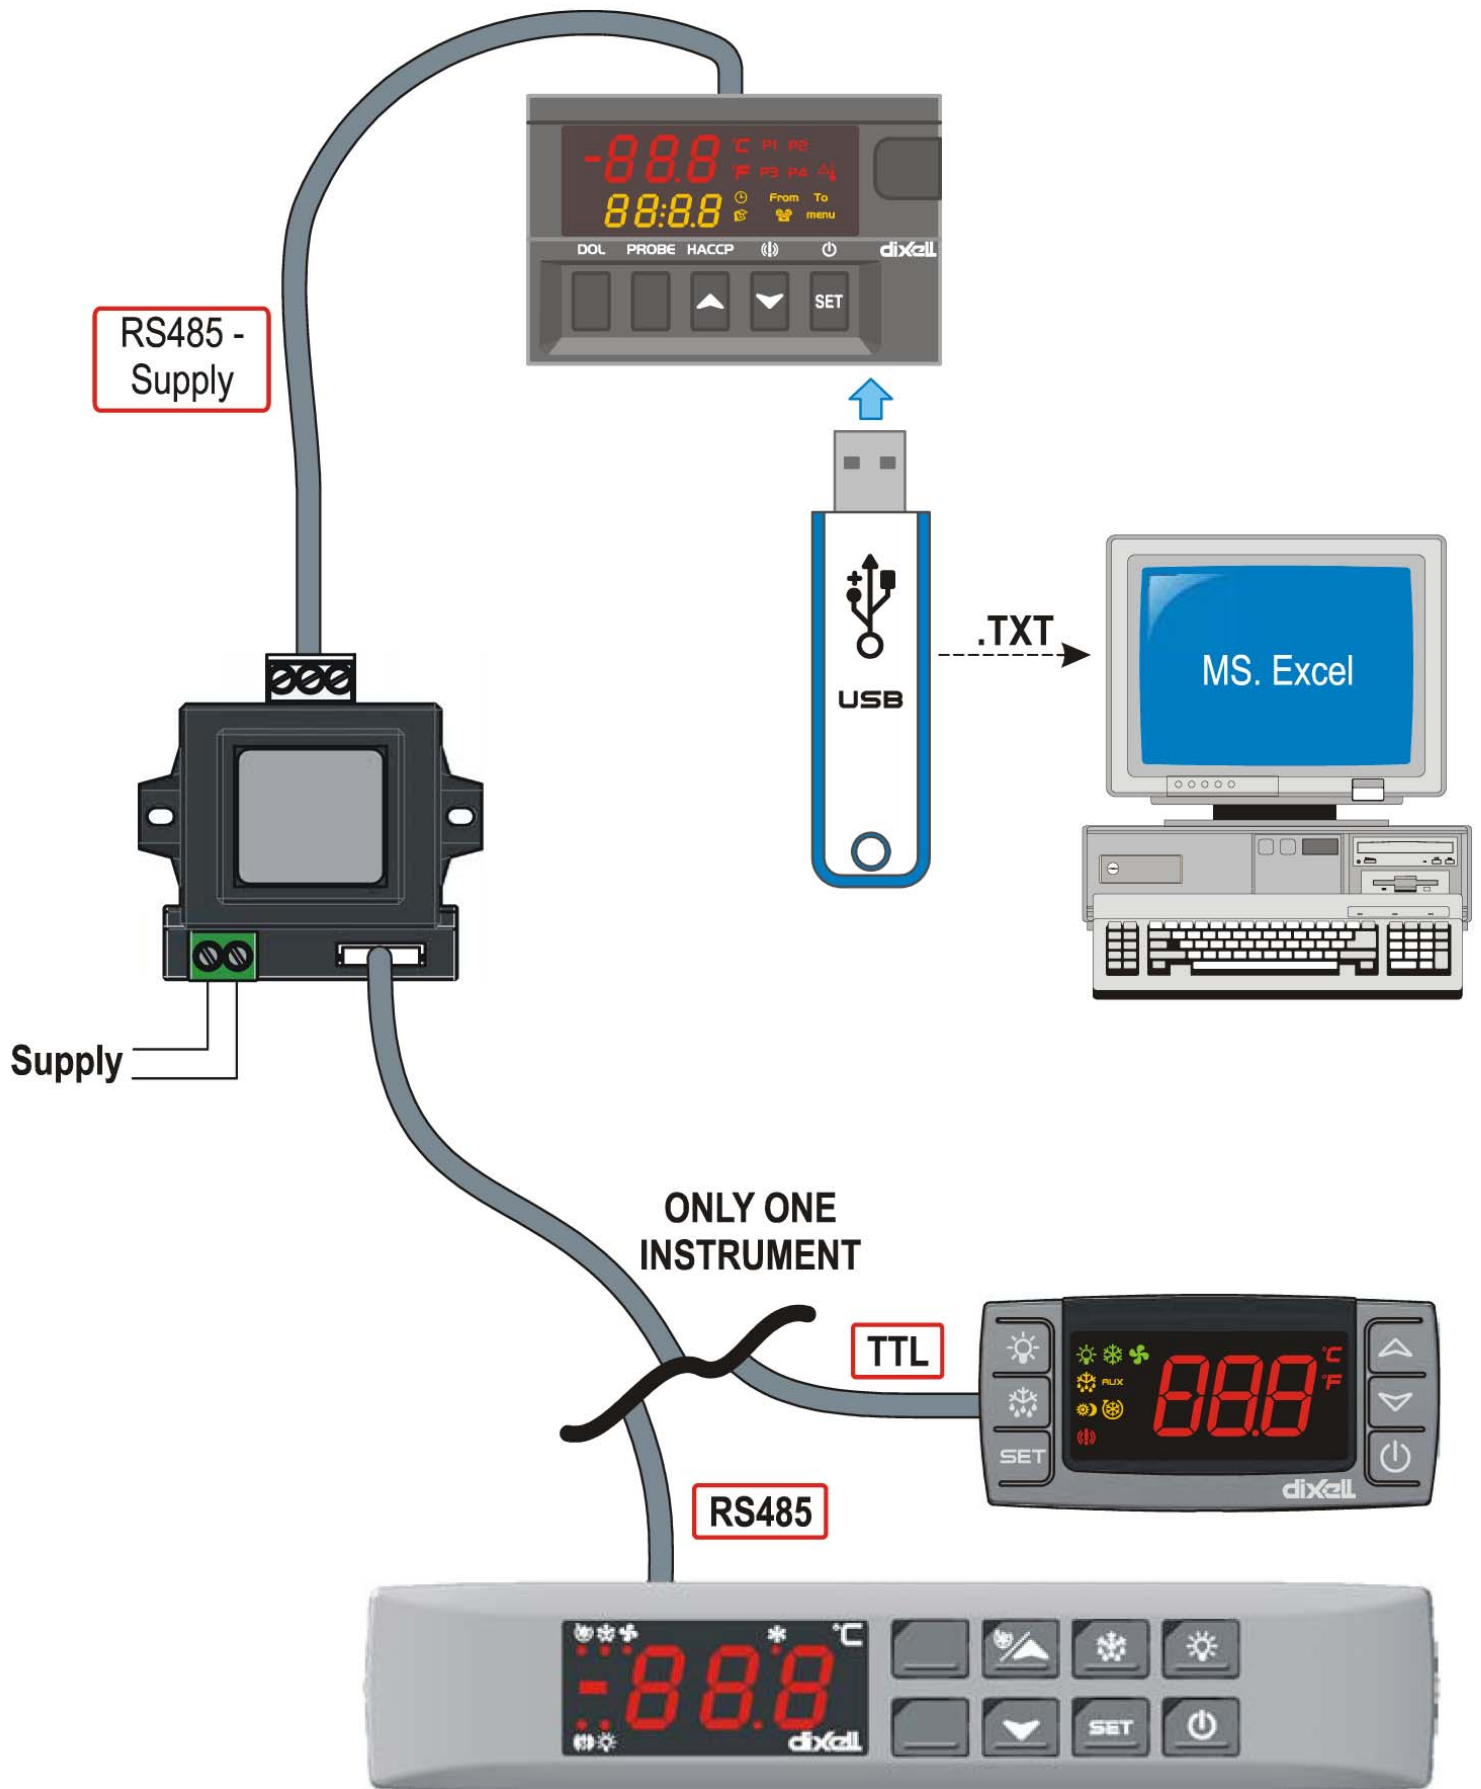

XDL01 and XJDL40D: for refit of applications without Dixell instruments

